

DIGITAL STEPPER DRIVE FOR STEPPER MOTORS

CONTROL MODES

- Profile Position-Velocity-Torque, Interpolated Position, Homing
- Camming, Gearing
- Indexer

COMMAND INTERFACE

- CANopen
- ASCII and discrete I/O
- Master encoder (Gearing/Camming)
- Stepper mode position commands:
Digital: Pulse/Dir, CW/CCW, Quad A/B
Analog: $\pm 10V$ position
- Servo mode commands:
Digital: Pulse/Dir, CW/CCW, Quad A/B
PWM velocity/torque command
Analog: $\pm 10V$ position/velocity/torque

COMMUNICATIONS

- CANopen
- RS-232

FEEDBACK

Incremental Encoders

- Digital quad A/B
- Panasonic Incremental A Format
- Aux. quad A/B encoder / encoder out

Absolute Encoders

- SSI, EnDat, Absolute A,
Tamagawa & Panasonic Absolute A
Sanyo Denki Absolute A, BiSS (B & C)

I/O DIGITAL

- 18 non-isolated, 8 isolated inputs,
- 5 isolated outputs, 2 non-isolated outputs

ANALOG

- 2 Reference Inputs, 12-bit

SAFE TORQUE OFF (STO)

- SIL 3, Category 3, PL d

DIMENSIONS: IN [MM]

- 6.78 x 4.70 x 1.99 [172.1 x 119.3 x 50.4] no heatsink
- 6.78 x 4.70 x 3.14 [172.1 x 119.3 x 79.9] with heatsink

CANopen®



Model	I _p	I _c	V _{dc}
TP2-090-07	7	5	90
TP2-090-10	10	10	90

Current ratings are for each axis

DESCRIPTION

Stepnet TP2 is a dual-axis, high-performance, DC powered drive for position and velocity control of stepper motors via CANopen. Using advanced FPGA technology, the TP2 provides a significant reduction in the cost per node in multi-axis CANopen systems.

Each of the two axes in the TP2 operate as CANopen nodes under DSP-402 for motion control devices. Supported modes include: Profile Position-Velocity, Interpolated Position Mode (PVT), and Homing.

In microstepping mode stepper command pulses and master encoder for camming or gearing are supported. Servo mode allows $\pm 10V$ analog position/velocity/torque, and PWM velocity/torque control.

There are sixteen high-speed digital inputs, two low-speed inputs for motor temperature switches, and eight optically isolated inputs. Outputs include five opto-isolated SSR and two isolated brake outputs. All inputs and outputs have programmable functions.

An RS-232 serial port provides a connection to Copley's CME2 software for commissioning, firmware upgrading, and saving configurations to flash memory.

Drive power is transformer-isolated DC from regulated or unregulated power supplies. An AuxHV input is provided for "keep-alive" operation enabling the drive PWM outputs to be completely powered down without losing position information, or communications with the control system.

GENERAL SPECIFICATIONS

Test conditions: Load = Wye connected load: 2 mH + 2 Ω line-line. Ambient temperature = 25°C, +HV = HV_{max}

MODEL	TP2-090-06	TP2-090-14	
OUTPUT POWER (EACH AXIS)			
Peak Current	7 (5)	10 (7.1)	Adc (Arms-sine), $\pm 5\%$
Peak time	1	1	Sec
Continuous current (Note 1)	5 (3.5)	10 (7.1)	Adc (Arms-sine) per phase
INPUT POWER			
HVmin~HVmax	+14 to +90	+14 to +90	Vdc Transformer-isolated
Ipeak	14	20	Adc (1 sec) peak
Icont	10	20	Adc continuous
Aux HV	+14 to +90 Vdc, 4 W (Typ, no load on encoder +5V outputs), 11 W, (Max, both encoder +5V @ 500 mA)		Optional, not required for operation
DIGITAL CONTROL			
Digital Control Loops	Current, velocity, position. 100% digital loop control		
Sampling rate (time)	Current loop: 16 kHz (62.5 μ s), Velocity & position loops: 4 kHz (250 μ s)		
Bus voltage compensation	Changes in bus or mains voltage do not affect bandwidth		
Minimum load inductance	200 μ H line-line		
COMMAND INPUTS (NOTE: DIGITAL INPUT FUNCTIONS ARE PROGRAMMABLE)			
Distributed Control Modes			
CANopen	Profile Position, Profile Velocity-torque (servo mode), Interpolated Position, Homing		
Stand-alone mode			
Analog position, velocity/torque(servo mode)	± 10 Vdc, 12-bit resolution	Dedicated differential analog input	
Digital position reference	Pulse/Direction, CW/CCW	Stepper commands (2 MHz maximum rate)	
	Quad A/B Encoder	2 M line/sec, 8 Mcount/sec (after quadrature)	
Digital torque & velocity reference (servo mode)	PWM, Polarity	PWM = 0% - 100%, Polarity = 1/0	
	PWM 50%	PWM = 50% $\pm 50\%$, no polarity signal required	
	PWM frequency range	1 kHz minimum, 100 kHz maximum	
	PWM minimum pulse width	220 ns	
Indexing	Up to 32 sequences can be launched from inputs or ASCII commands.		
Camming	Up to 10 CAM tables can be stored in flash memory		
ASCII	RS-232, DTE, 9600~115,200 Baud, 3-wire, RJ-11 connector		
DIGITAL INPUTS			
Number 24			
[IN1,2,10,11]	Digital, non-isolated, Schmitt trigger, 1.5 μ s RC filter, 24 Vdc compatible, programmable 15k pull-up/down to +5 Vdc/ground, Vt+ = 2.5~3.5 Vdc, VT- = 1.3~2.2 Vdc, VH = 0.7~1.5 Vdc		
[IN19~21,22~24]	Digital, non-isolated, Schmitt trigger, 1.5 μ s RC filter, 24 Vdc compatible, 15k pull-up to +5 Vdc/ground, Vt+ = 2.5~3.5 Vdc, VT- = 1.3~2.2 Vdc, VH = 0.7~1.5 Vdc		
[IN3,4,12,13]	Digital, non-isolated, programmable as single-ended or differential pairs, 100 ns RC filter, 12 Vdc max, programmable pull-up/down per input to +5 Vdc/ground, SE: Vin-LO \leq 2.3 Vdc, Vin-HI \geq 2.7 Vdc, VH = 45 mV typ, DIFF: Vin-LO \leq 200 mVdc, Vin-HI \geq 200 mVdc, VH = 45 mV typ		
[IN5~8,14~17]	Digital, opto-isolated, single-ended, $\pm 15\sim 30$ Vdc compatible, bi-polar, 2 groups of 4, each with a common terminal		
[IN9,18]	Rated impulse \geq 800 V, Vin-LO \leq 6.0 Vdc, Vin-HI \geq 10.0 Vdc, Input current ± 3.6 mA @ ± 24 Vdc, typical		
Functions	Default as motor overtemp inputs on feedback connectors, 12 Vdc max, programmable to other functions Other digital inputs are also programmable for the Motemp function 330 μ s RC filter, 4.99k pullup to +5 Vdc, Vt+ = 2.5~3.5 Vdc, VT- = 1.3~2.2 Vdc, VH = 0.7~1.5 Vdc All inputs are programmable, [IN1 & IN10] default to drive axes A & B Enable function and are programmable		
ANALOG INPUTS			
Number	2		
[AIN1~2]	Differential, ± 10 Vdc, 5 k Ω input impedance, 12-bit resolution		
SAFE TORQUE OFF (STO)			
Function	PWM outputs active and current to the motor will not be possible when the STO function is asserted		
Standard	Designed to IEC-61508-1, IEC-61508-2, IEC-61800-5-2, ISO-13849-1		
Safety Integrity Level	SIL 3, Category 3, Performance level d		
Inputs	2 two-terminal: STO_IN1+,STO_IN1-, STO_IN2+, STO_IN2-		
Type	Opto-isolators, 24V compatible, Vin-LO \leq 6.0 Vdc or open, Vin-HI \geq 15.0 Vdc,		
Input current (typical)	STO_IN1: 9.0 mA, STO_IN2: 4.5 mA		
Response time	2 ms (IN1, IN2) from Vin \leq 6.0 Vdc to interruption of energy supplied to motor		
Reference	Complete information and specifications are in the Accelnet & Stepnet Plus Panels STO Manual		
DIGITAL OUTPUTS			
Number	7		
[OUT1~5]	Opto-isolated SSR, two-terminal, 300 mA max, 24 V tolerant, Rated impulse \geq 800 V, series 1 Ω resistor		
[OUT6~7]	Opto-isolated MOSFET, default as motor brake control, current-sinking, 1 Adc max, flyback diodes to +24 V external power supply for driving inductive loads		
	Programmable for other functions if not used for brake		
RS-232 PORT			
Signals	RxD, TxD, Gnd in 6-position, 4-contact RJ-11 style modular connector, non-isolated, common to Signal Ground		
Mode	Full-duplex, DTE serial communication port for drive setup and control, 9,600 to 115,200 Baud		
Protocol	Binary and ASCII formats		
CAN PORT			
Signals	CANH, CANL, CAN_GND in 8-position dual RJ-45 style modular connector, wired as per CAN Cia DR-303-1, V1.1		
Format	CAN V2.0b physical layer for high-speed connections compliant		
Data	CANopen Device Profile DSP-402		
Node-ID selection	16 position rotary switches on front panel with 3 additional Node-ID bits available as digital inputs or programmable to flash memory (7-bit addressing, 127 nodes per CAN network)		

NOTES:

1) Heatsink or forced-air required for continuous current rating



GENERAL SPECIFICATIONS

DC POWER OUTPUTS

Number: Ratings	2: +5 Vdc, 500 mA max each output, thermal and short-circuit protected
Connections	Axis A: J1-17, J1-32, J7-6, J7-17; combined current from these pins cannot exceed 500 mA Axis B: J1-23, J1-38, J8-6, J8-17; combined current from these pins cannot exceed 500 mA

INDICATORS

AMP	Bicolor LED, drive state indicated by color, and blinking or non-blinking condition
RUN	Green LED, status of CANopen finite-state-automaton (FSA)
ERR	Red LED, shows errors due to time-outs, unsolicited state changes, or local errors
L/A	Green LED, Link/Act, shows the state of the physical link and activity on the link (CANopen connection)
	RUN, ERR, and L/A LED colors and blink codes conform to ETG.1300 S(R) V1.1.0

PROTECTIONS

HV Overvoltage	+HV > 90 Vdc	Drive outputs turn off until +HV < 90 Vdc (See Input Power for HV _{max})
HV Undervoltage	+HV < +14 Vdc	Drive outputs turn off until +HV > +14 Vdc
Drive over temperature	Heat plate > 70°C.	Drive outputs turn off
Short circuits	Output to output, output to ground, internal PWM bridge faults	
I ² T Current limiting	Programmable: continuous current, peak current, peak time	
Motor over temperature	Digital inputs programmable to detect motor temperature switch	
Feedback Loss	Inadequate analog encoder amplitude or missing incremental encoder signals	

MECHANICAL & ENVIRONMENTAL

Size IN [MM]	6.78 x 4.70 x 1.99 [172.1 x 119.3 x 50.4] without heatsink 6.78 x 4.70 x 3.14 [172.1 x 119.3 x 79.9] with heatsink
Weight LB[KG]	1.5 [0.68] without heatsink, 2.75 [1.25] with heatsink
Ambient temperature	0 to +45C operating, -40 to +85C storage
Humidity	0 to 95%, non-condensing
Vibration	2 g peak, 10~500 Hz (sine), IEC60068-2-6
Shock	10 g, 10 ms, half-sine pulse, IEC60068-2-27
Contaminants	Pollution degree 2
Environment	IEC68-2: 1990
Cooling	Heat sink and/or forced air cooling required for continuous power output

AGENCY STANDARDS CONFORMANCE (PENDING)

Approvals

UL and cUL recognized component to UL 61800-5-1 (file no. E168959)
TÜV SÜD Functional Safety to IEC 61508 and ISO 13849 <pending>

Functional Safety

IEC 61508-1, IEC 61508-2, EN (ISO) 13849-1, EN (ISO) 13849-2, IEC 61800-5-2
(see *The Stepnet & Stepnet Plus Panels STO Manual for further detail*)

Electrical Safety

Directive 2006/95/EC – Low Voltage: IEC 61800-5-1:2007
UL 61800-5-1-2012

EMC

Directive 2004/108/EC – EMC:
IEC 61800-3:2004+A1:2011

Hazardous Substances

Directive 2011/65/EU (RoHS Directive)





GENERAL SPECIFICATIONS

FEEDBACK

Incremental:

Digital Incremental Encoder Quadrature signals, (A, /A, B, /B, X, /X), differential (X, /X Index signals not required)
5 MHz maximum line frequency (20 M counts/sec)
MAX3097 differential line receiver with 121 Ω terminating resistor between A & /A, B & /B inputs
X & /X inputs have 130 Ω terminating resistor, S & /S inputs have 221 Ω terminating resistor
X & S inputs have 1 k Ω pull-ups to +5V, /X & /X inputs have 1 k Ω pull-down to ground

Absolute:

SSI Clock (X, /X), Data (S, /S) signals, 4-wire, clock output from TP2, data returned from encoder
EnDat Serial data and clock signals (DATA, /DATA, CLK, /CLK), differential, 121 Ω inputs
Sin/cos signals (Sin+, Sin-, Cos+, Cos-)

Absolute A Tamagawa Absolute A, Panasonic Absolute A Format, Sanyo Denki Absolute A
SD+, SD- (S, /S) signals, 2.5 or 4 MHz, 2-wire half-duplex communication

BiSS (B&C) Status data for encoder operating conditions and errors
MA+, MA- (X, /X), SL+, SL- (S, /S) signals, 4-wire, clock output from TP2, data returned from encoder

MULTI-MODE ENCODER PORT

As Input

Digital quadrature encoder (A, /A, B, /B, X, /X), 5 MHz maximum line frequency (20 M counts/sec),
MAX3097 line receiver, 1.5 k Ω pull-ups to +5V on X & S inputs, 1.5 k Ω pull-downs to Sgnd on /X & /S inputs
Digital absolute encoder (Clk, /Clk, Dat, /Dat) half or full-duplex operation,
S & X inputs are used for absolute encoder interface

As Emulated Output

Quadrature encoder emulation with programmable resolution to 4096 lines (65,536 counts) per rev
from analog sin/cos encoders, resolvers, or absolute encoders

As Buffered Output

A, /A, B, /B, from MAX3032 differential line driver, X, /X, S, /S from MAX3362 differential line driver
Digital A/B/X encoder feedback signals from primary quad encoder are buffered (see line drives above)

CANOPEN COMMUNICATIONS

Based on the CAN V2.0b physical layer, a robust, two-wire communication bus originally designed for automotive use where low-cost and noise-immunity are essential, CANopen adds support for motion-control devices and command synchronization. The result is a highly effective combination CANOPEN CONNECTIONS

Stepnet Plus uses the CAN physical layer signals CAN_H, CAN_L, and CAN_GND for connection, and CANopen protocol for communication. Before installing the drive in a CAN

network, it must be assigned a CAN Node-ID (address). A maximum of 127 CAN nodes are allowed on a single CAN bus.

CANOPEN LEDS (ON RJ-45 CONNECTORS)


RUN Green: Shows the state of the FSA (Finite State Automaton)
Off = Init
Blinking = Pre-operational
Single-flash = Safe-operational
On = Operational

ERR Red: Shows errors such as watchdog timeouts and unsolicited state changes in the TP2 due to local errors.
Off = CANopen communications are working correctly
Blinking = Invalid configuration, general configuration error
Single Flash = Local error, slave has changed CANopen state autonomously
Double Flash = PDO or CANopen watchdog timeout, or an application watchdog timeout has occurred

L/A Green: Shows the state of the physical link and activity on the link.

A green LED indicates the state of the CANopen network:


LED	Link	Activity	Condition
ON	Yes	No	Port Open
Flickering	Yes	Yes	Port Open with activity
Off	No	(N/A)	Port Closed

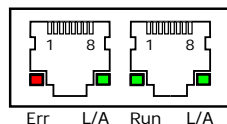

J3: CANopen PORTS

RJ-45 receptacles,
8 position, 4 contact

PIN	SIGNAL
8	CAN_V+
7	GND
6	CAN_SHLD
5	THRU
4	THRU
3	CAN_GND
2	CAN_L
1	CAN_H

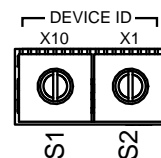

CANopen DEVICE ID (NETWORK ADDRESS)

In a CANopen network, nodes are assigned Node-IDs 1~127. Node-ID 0 is reserved for the CAN bus master. In the TP2, the node address is provided by two 16-position rotary switches with hexadecimal encoding. These can set the address of the drive A-axis from 0x01~0x7E (1~126 decimal). The B-axis will have an address of the A-axis + 1. The chart shows the decimal values of the hex settings of each switch. In the TP2, this is provided by two 16-position rotary switches with hexadecimal encoding. These can set the Device ID of the drive from 0x00~0xFF (0~255 decimal). The chart shows the decimal values of the hex settings of each switch.

Example 1: Find the switch settings for decimal Device ID 107:

- Find the highest number in the x10 column that is less than 107 and set x10 to the hex value in the same row:
96 < 107 and 112 > 107, so x10 = 96 = Hex 6
- Subtract 96 from the desired Device ID to get the decimal value for the switch x1 and set it to the Hex value in the same row:
x1 = (107 - 96) = 11 = Hex B
- Result: X10 = 6, X1 = B, Alias = 0x6B (107)

CANopen Device ID Switch Decimal values

Set	x10	x1
Hex	Dec	
0	0	0
1	16	1
2	32	2
3	48	3
4	64	4
5	80	5
6	96	6
7	112	7

Set	x10	x1
Hex	Dec	
8	128	8
9	144	9
A	160	10
B	176	11
C	192	12
D	208	13
E	224	14
F	240	15

INDICATORS: DRIVE STATE

Two bi-color LEDs give the state of the TP2 drive. Colors do not alternate, and can be solid ON or blinking. When multiple conditions occur, only the top-most condition will be displayed. When that condition is cleared the next one below will shown.

- | | |
|--------------------------|---|
| 1) Red/Blinking | = Latching fault. Operation will not resume until drive is Reset. |
| 2) Red/Solid | = Transient fault condition. Drive will resume operation when the condition causing the fault is removed. |
| 3) Green/Double-Blinking | = STO circuit active, drive outputs are Safe-Torque-Off |
| 4) Green/Slow-Blinking | = Drive OK but NOT-enabled. Will run when enabled. |
| 5) Green/Fast-Blinking | = Positive or Negative limit switch active. |
| | Drive will only move in direction not inhibited by limit switch. |
| 7) Green/Solid | = Drive OK and enabled. Will run in response to reference inputs or CANopen commands. |

Latching Faults


Defaults

- Short circuit (Internal or external)
- Drive over-temperature
- Motor over-temperature
- Feedback Error
- Following Error

Optional (programmable)

- Over-voltage
- Under-voltage
- Motor Phasing Error
- Command Input Fault

AMP LEDS & DEVICE ID SWITCHES

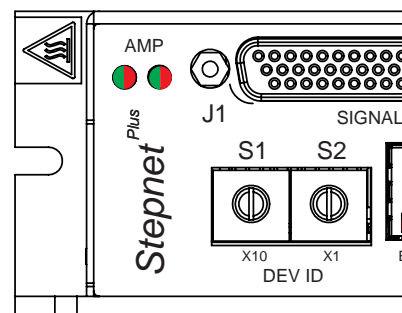

COMMUNICATIONS: RS-232 SERIAL

TP2 is configured via a three-wire, full-duplex DTE RS-232 port that operates from 9600 to 115,200 Baud, 8 bits, no parity, and one stop bit. Signal format is full-duplex, 3-wire, DTE using RxD, TxD, and Gnd. Connections to the TP2 RS-232 port are through J4, an RJ-11 connector. The TP2 Serial Cable Kit (SER-CK) contains a modular cable, and an adapter that connects to a 9-pin, Sub-D serial port connector (COM1, COM2, etc.) on PC's and compatibles.



After power-on, reset, or transmission of a Break character, the Baud rate will be 9,600. Once communication has been established at this speed, the Baud rate can be changed to a higher rate (19,200, 57,600, 115,200).

SER-CK SERIAL CABLE KIT

The SER-CK provides connectivity between a D-Sub 9 male connector and the RJ-11 connector on the TP2. It includes an adapter that plugs into the COM1 (or other) port of a PC and uses common modular cable to connect to the TP2. The connections are shown in the diagram TP2ow.

J4: RS-232 PORT

RJ-11 receptacle,
6 position, 4 contact

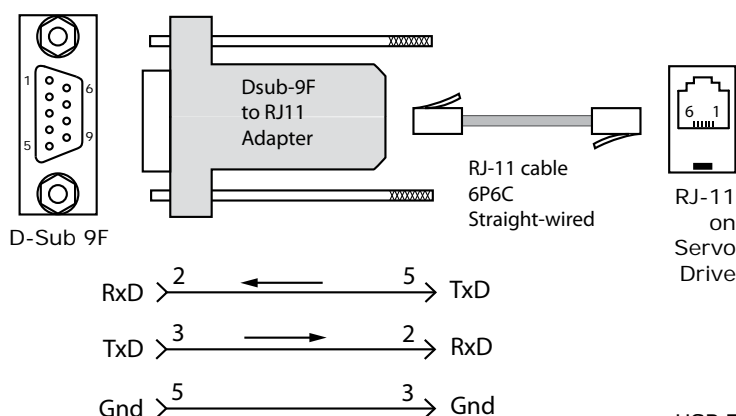

PIN	SIGNAL
2	RxD
3,4	Gnd
5	TxD



Don't forget to order a Serial Cable Kit SER-CK when placing your order for a TP2!

USB TO RS-232 ADAPTERS

These may or may not have the speed to work at the 115,200 Baud rate which gives the best results with CME2. Users have reported that adapters using the FTDI chipset work well with CME2

ASCII COMMUNICATIONS

The Copley ASCII Interface is a set of ASCII format commands that can be used to operate and monitor Copley Controls Stepnet, Stepnet, and TP2 series amplifiers over an RS-232 serial connection. For instance, after basic amplifier configuration values have been programmed using CME 2, a control program can use the ASCII Interface to:

- Enable the amplifier in Programmed Position mode.
- Home the axis.
- Issue a series of move commands while monitoring position, velocity, and other run-time variables.

The Baud rate defaults to 9,600 after power-on or reset and is programmable up to 115,200 thereafter.

After power-on, reset, or transmission of a Break character, the Baud rate will be 9,600. Once communication has been established at this speed, the Baud rate can be changed to a higher rate (19,200, 57,600, 115,200).

ASCII parameter 0x90 holds the Baud rate data. To set the rate to 115,200 enter this line from a terminal:

```
s r0x90 115200 <enter>
```

Then, change the Baud rate in the computer/controller to the new number and communicate at that rate.


Additional information can be found in the ASCII Programmers Guide on the Copley website

SAFE TORQUE OFF (STO)

The Safe Torque Off (STO) function is defined in IEC 61800-5-2. Two channels are provided which, when de-energized, prevent the upper and lower devices in the PWM outputs from being operated by the digital control core.

This provides a positive OFF capability that cannot be overridden by the control firmware, or associated hardware components. When the opto-couplers are energized (current is flowing in the input diodes), the control core will be able to control the on/off state of the PWM outputs.

INSTALLATION




DANGER

Refer to the Accelnet & Stepnet Plus Panels STO Manual

The information provided in the *Accelnet & Stepnet Plus Panels STO Manual* must be considered for any application using the TP2 drive's STO feature.

FAILURE TO HEED THIS WARNING CAN CAUSE EQUIPMENT DAMAGE, INJURY, OR DEATH.



STO BYPASS (MUTING)


In order for the PWM outputs of the TP2 to be activated, current must be flowing through all of the opto-couplers that are connected to the STO-IN1 and STO-IN2 terminals of J6, and the drive must be in an ENABLED state. When the opto-couplers are OFF, the drive is in a Safe Torque Off (STO) state and the PWM outputs cannot be activated by the control core to drive a motor.

This diagram shows connections that will energize all of the opto-couplers from an internal current-source. When this is done the STO feature is overridden and control of the output PWM stage is under control of the digital control core.

If not using the STO feature, these connections must be made in order for the TP2 to be enabled.


STO BYPASS CONNECTIONS

FUNCTIONAL DIAGRAM



**Current must flow
through all of the
opto-couplers
before the drive
can be enabled**

* STO bypass connections on the TP2 and Xenus XEL-XPL models are different. If both drives are installed in the same cabinet, the diode should be wired as shown to prevent damage that could occur if the STO bypass connectors are installed on the wrong drive. The diode is not required for STO bypass on the TP2 and can be replaced by a wire between pins 7 and 9.

Bypass Plug Connections
Jumper pins:
2-4, 3-5, 6-8, 7-9 *

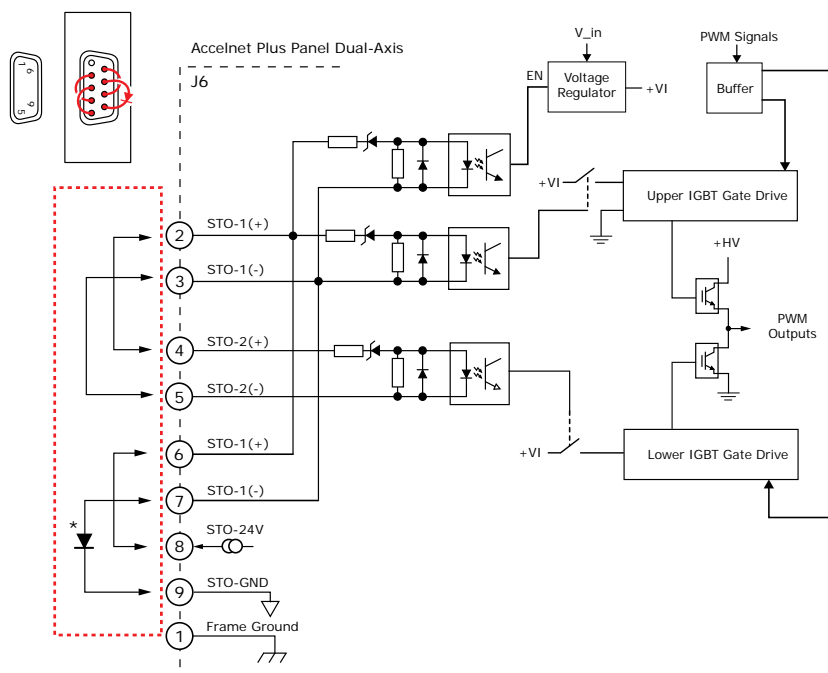

SAFETY CONNECTOR J6

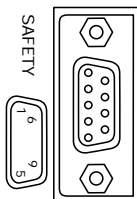

CONNECTIONS

PIN	SIGNAL	PIN	SIGNAL
1	Frame Gnd	6	STO-IN1+
2	STO-IN1+	7	STO-IN1-
3	STO-IN1-	8	STO-Bypass
4	STO-IN2+	9	STO-Gnd
5	STO-IN2-		


DIGITAL COMMAND INPUTS: POSITION

POSITION COMMAND INPUTS


Single-ended digital position commands must be sourced from devices with active pull-up and pull-down to take advantage of the high-speed inputs.

For differential commands, the A & B channels of the multi-mode encoder ports are used.

SINGLE-ENDED PULSE & DIRECTION

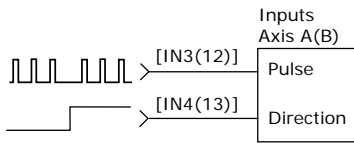


DIFFERENTIAL PULSE & DIRECTION

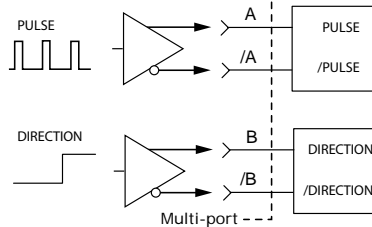


SINGLE-ENDED: IN3, 4, 12, 13

Signal	Axis A	Axis B
[IN3(12)] Pls, CU, Enc A	J1-9	J1-14
[IN4(13)] Dir, CD, Enc B	J1-10	J1-15
Signal Ground	J1-6,16,22,31,37,44	
Frame Ground	J1-1	

SINGLE-ENDED CU/CD

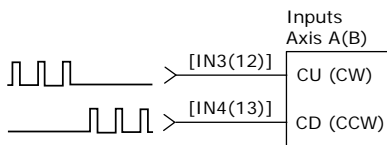


DIFFERENTIAL CU/CD

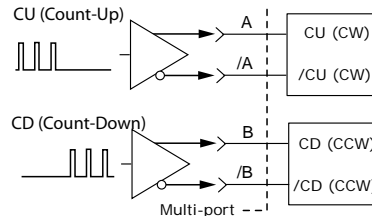


DIFFERENTIAL: MULTI-PORT A, /A, B, /B

Signal	Axis A	Axis B
[Enc A] Pls, CU, Enc A	J1-36	J1-42
[Enc /A] /Pls, /CU, Enc /A	J1-21	J1-27
[Enc B] Dir, CD, Enc B	J1-35	J1-41
[Enc /B] /Dir, /CD, Enc /B	J1-20	J1-26
Signal Ground	J1-6,16,22,31,37,44	
Frame Ground	J1-1	

QUAD A/B ENCODER SINGLE-ENDED

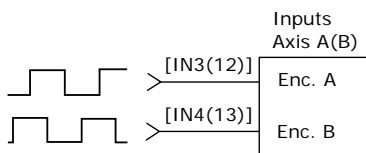

QUAD A/B ENCODER DIFFERENTIAL

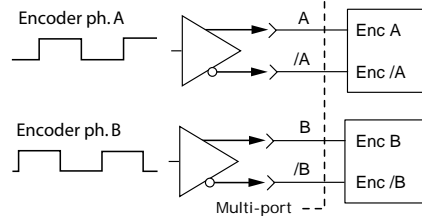


DIGITAL COMMAND INPUTS: VELOCITY, TORQUE


Single-ended digital torque or velocity commands must be sourced from devices with active pull-up and pull-down to take advantage of the high-speed inputs.

For differential commands, the A & B channels of the multi-mode encoder ports are used.

SINGLE-ENDED PWM & DIRECTION

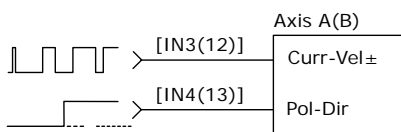


DIFFERENTIAL PWM & DIRECTION

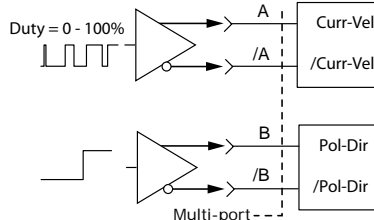


SINGLE-ENDED: IN3, 4, 12, 13

Signal	Axis A	Axis B
[IN3(12)] Curr-Vel±	J1-9	J1-14
[IN4(13)] / Curr-Vel±	J1-10	J1-15
Signal Ground	J1-6,16,22,31,37,44	
Frame Ground	J1-1	

SINGLE-ENDED 50% PWM

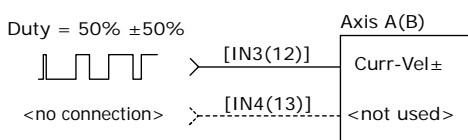

DIFFERENTIAL 50% PWM

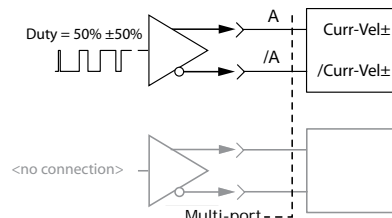

DIFFERENTIAL: MULTI-PORT A, /A, B, /B


Signal	Axis A	Axis B
[Enc A] Curr-Vel±	J1-36	J1-42
[Enc /A] /Curr-Vel±	J1-21	J1-27
[Enc B] Pol-Dir	J1-35	J1-41
[Enc /B] /Pol-Dir	J1-20	J1-26
Signal Ground	J1-6,16,22,31,37,44	
Frame Ground	J1-1	

MULTI-MODE PORT AS AN INPUT

INPUT TYPES


POSITION COMMAND INPUTS: DIFFERENTIAL

- Pulse & Direction
- CW & CCW (Clockwise & Counter-Clockwise)
- Encoder Quad A & B
- Camming Encoder A & B input

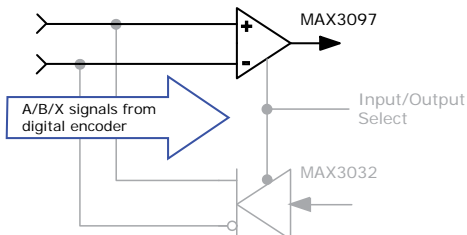


CURRENT or VELOCITY COMMAND INPUTS: DIFFERENTIAL

- Current or Velocity & Direction
- Current or Velocity (+) & Current or Velocity (-)

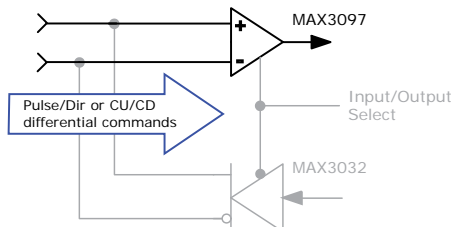



SECONDARY FEEDBACK: INCREMENTAL

- Quad A/B/X incremental encoder

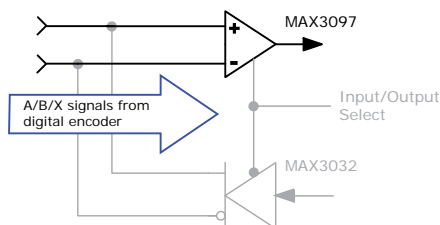


SECONDARY FEEDBACK: ABSOLUTE

- S channel: Absolute A encoders (2-wire)
The S channel first sends a Clock signal and then receives Data from the encoder in half-duplex mode.
- S & X channels: SSI, BiSS, EnDat encoders (4-wire)
The X channel sends the Clock signal to the encoder, which initiates data transmission from the encoder on the S-channel in full-duplex mode

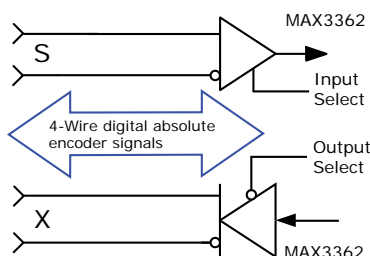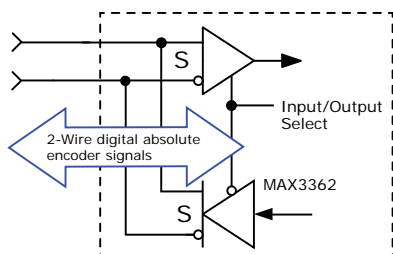

SIGNALS & PINS

Signal	Axis A J1	Axis B J1
Pulse, CW, Encoder A	36	42
/Pulse, /CW, Encoder /A	21	27
Direction, CCW, Encoder B	35	41
/Direction, /CCW, Encoder /B	20	26
Quad Enc X, Absolute Clock	34	40
Quad Enc /X, /Absolute Clock	19	25
Enc S, Absolute (Clock) Data	33	39
Enc /S, / Absolute (Clock) Data	18	24
Signal Ground	6, 16, 22, 31, 37, 44	
Frame Ground	1	

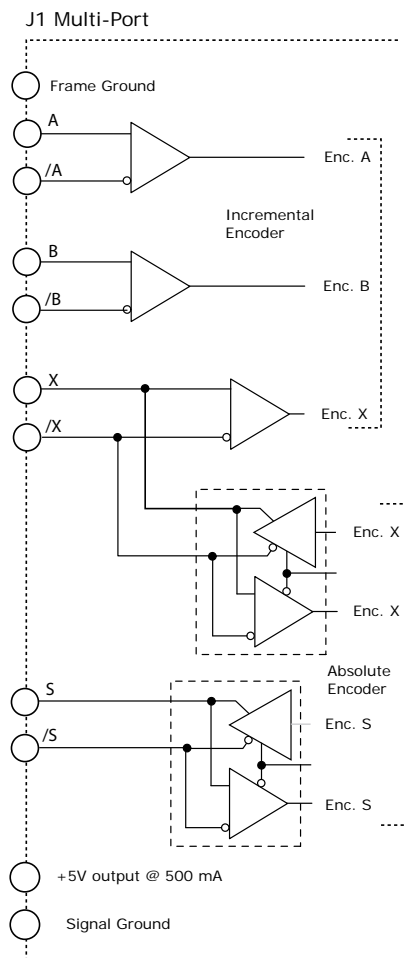

MULTI-MODE PORT AS AN OUTPUT

OUTPUT TYPES

BUFFERED FEEDBACK OUTPUTS: DIFFERENTIAL

- Encoder Quad A, B, X channels
- Direct hardware connection between quad A/B/X encoder feedback and differential line drivers for A/B/X outputs

EMULATED FEEDBACK OUTPUTS: DIFFERENTIAL




Firmware produces emulated quad A/B signals from feedback data from the following devices:

- Absolute encoders
- Resolvers (-R option)
- Analog Sin/Cos incremental encoders

SIGNALS & PINS


Signal	Axis A J1	Axis B J1
Encoder A	36	42
Encoder /A	21	27
Encoder B	35	41
Encoder /B	20	26
Encoder X	34	40
Encoder /X	19	25
Encoder S	33	39
Encoder /S	18	24
Signal Ground	6, 16, 22, 31, 37, 44	
Frame Ground	1	

J1 Multi-Port

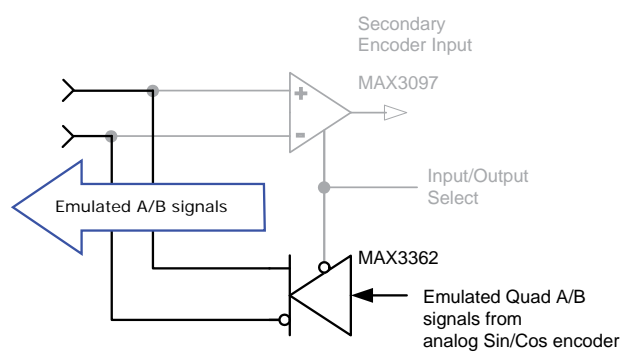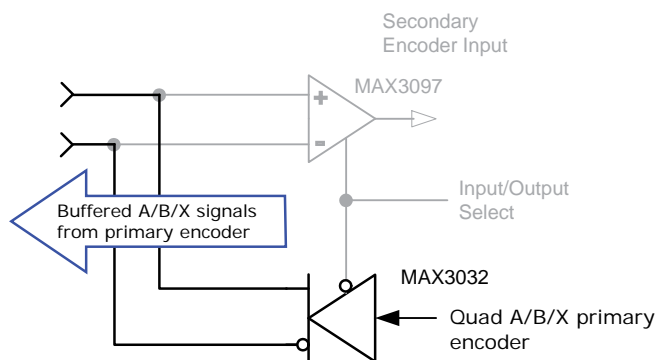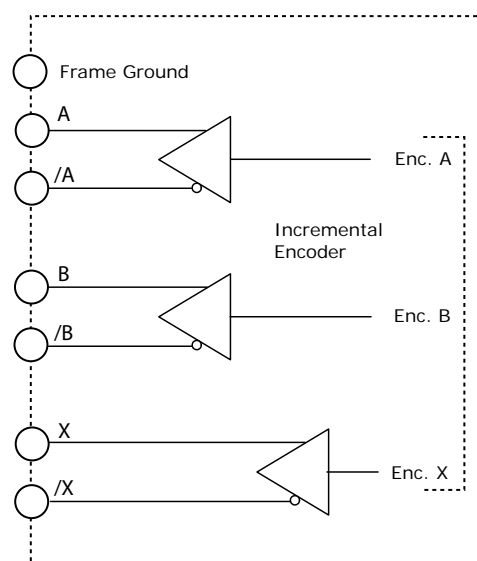


CME2 DEFAULTS


These tables show the CME2 default settings. They are user-programmable and the settings can be saved to non-volatile flash memory.




Axis A	Config	PU/PD	Axis B	Config	PU/PD
IN1	Enable-LO	+5V or Sgnd	*IN10	Enable-LO	+5V or Sgnd
IN2	Not Configured		*IN11	Not Configured	
IN3			*IN12		
IN4			*IN13		
IN5	Opto Not Configured		IN14	Opto Not Configured	
IN6					
IN7					
IN8					
IN9	Motemp	+5V	IN18	Motemp	+5V
IN19	J7-2		IN22	J8-2	
IN20	J7-3		IN23	J8-3	
IN21	J7-4		IN24	J8-4	



Axis A	Axis B	Notes
OUT1	OUT2	Fault Active-OFF
OUT3	Not Configured	
OUT4		
OUT5		
OUT6	OUT7	Brake Active-HI



Axes A, B	Notes
Analog: Reference Filter	Disabled
Vloop: Input Filter	Disabled
Vloop: Output Filter 1	Low Pass, Butterworth, 2-pole, 200 Hz
Vloop: Output Filter 2	Disabled
Vloop: Output Filter 3	Disabled
Iloop: Input Filter 1	Disabled
Iloop: Input Filter 2	Disabled
Input Shaping	Disabled



Axis A	Axis B	Notes
✓	✓	Short Circuit
✓	✓	Amp Over Temp
✓	✓	Motor Over Temp
		Over Voltage
		Under Voltage
		Motor Wiring Disconnected

OPTIONAL FAULTS

		Over Current (Latched)
--	--	------------------------



Axes A, B	Notes
Method	Set Current Position as Home

HIGH SPEED INPUTS: IN1, IN2, IN10, IN11, IN19, IN20, IN21, IN22, IN23, IN24

- Digital, non-isolated, high-speed
- Programmable pull-up/pull-down: IN1, IN2, IN10, IN11
- Fixed pull-up to +5V: IN19, IN20, IN21, IN22, IN23, IN24
- 24V Compatible
- Programmable functions

SPECIFICATIONS


Input	Data	Notes
Input Voltages	HI	$VT+ = 2.5 \sim 3.5$ Vdc
	LO	$VT- = 1.3 \sim 2.2$ Vdc
	VH ¹	$VH = \pm 0.7 \sim 1.5$ Vdc
	Max	+30 Vdc
	Min	0 Vdc
Pull-up/down	R1	15 k Ω
Low pass filter	R2	15 k Ω
	C1	100 pF
Input Current	24V	1.3 mAdc
	0V	-0.33 mAdc
Time constant	RC ²	1.5 μ s

CONNECTIONS

Input	Pin	Input	Pin
IN1	J1-7	IN19	J7-2
IN2	J1-8	IN20	J7-3
IN10	J1-12	IN21	J7-4
IN11	J1-13	IN22	J8-2
Sgnd	J1: 6, 16, 22, 31, 37, 44	IN23	J8-3
		IN24	J8-4
		Sgnd	J7, J8: 5, 16, 25, 26

Notes:

- 1) VH is hysteresis voltage (VT+) - (VT-)
- 2) The R2*C2 time constant applies when input is driven by active HI/LO devices

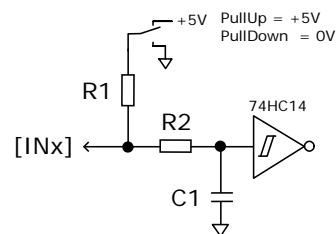

SINGLE-ENDED/DIFFERENTIAL INPUTS: IN3, IN4, IN12, IN13

- Digital, non-isolated, high-speed
- Programmable pull-up/pull-down
- 12V Compatible
- Single-ended or Differential
- Programmable functions

SPECIFICATIONS

Input	Data	Notes
Input Voltages Single-ended	HI	$V_{in} \geq 2.7$ Vdc
	LO	$V_{in} \leq 2.3$ Vdc
	VH ¹	45 mVdc typ
Input Voltages Differential ³	HI	$V_{diff} \geq +200$ mVdc
	LO	$V_{diff} \leq -200$ mVdc
	VH	± 45 mVdc typ
Common mode	Vcm	0 to +12 Vdc
Pull-up/down	R1	10 k Ω
Low pass filter	R2	1 k Ω
	C1	100 pF
Time constant	RC ²	100 ns


Notes:

- 1) VH is hysteresis voltage IN2 - IN3 or IN12 - IN13
- 2) The R2*C2 time constant applies when input is driven by active HI/LO devices
- 3) $V_{diff} = AINn(+) - AINn(-)$
n = 1 for Axis A, 2 for Axis B


CONNECTIONS

S.E.	DIFF	Pin
IN3	IN3+	J1-9
IN4	IN3-	J1-10
IN12	IN12+	J1-14
IN13	IN12-	J1-15
Sgnd		J1-6, 16, 22, 31, 37, 44

SINGLE-ENDED

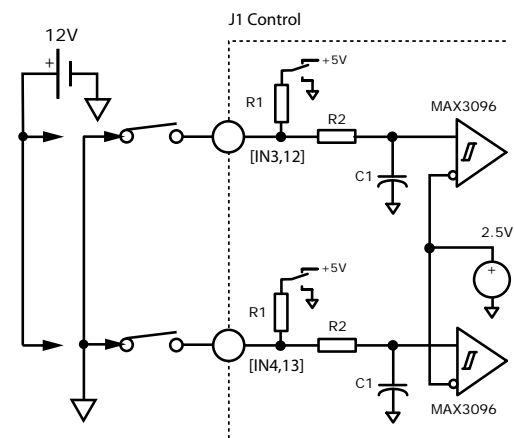

DIFFERENTIAL

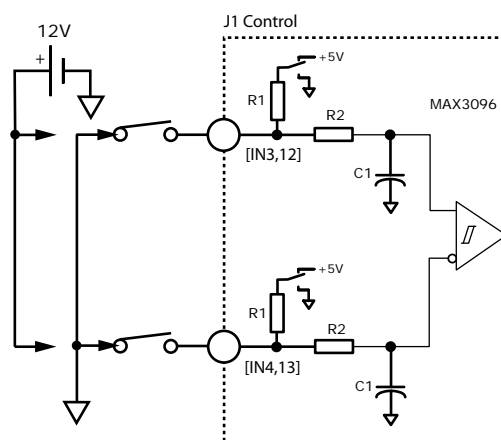

MOTOR OVERTEMP INPUTS: IN9, IN18

- Digital, non-isolated
- Motor overtemp inputs
- 12V Compatible
- Programmable functions

SPECIFICATIONS

Input	Data	Notes
Input Voltages	HI	$V_{in} \geq 3.5 \text{ Vdc}$
	LO	$V_{in} \leq 0.7 \text{ Vdc}$
	Max	+12 Vdc
	Min	0 Vdc
Pull-up/down	R1	4.99 k Ω
Input Current	12V	1.4 mA _{dc}
	0V	-1.0 mA _{dc}
Low pass filter	R2	10 k Ω
	C1	33 nF
Time constant	Te	330 μs *


* RC time constant applies when inputs are driven by active high/low devices

CONNECTIONS

Input	Pin
IN9	J7-7
IN18	J8-7
Sgnd	J7,8-5, 16, 25, 26

MOTOR OVER TEMP INPUT

The 4.99k pull-up resistor works with PTC (positive temperature coefficient) thermistors that conform to BS 4999:Part 111:1987, or switches that open/close indicating a motor over-temperature condition. The active level is programmable.

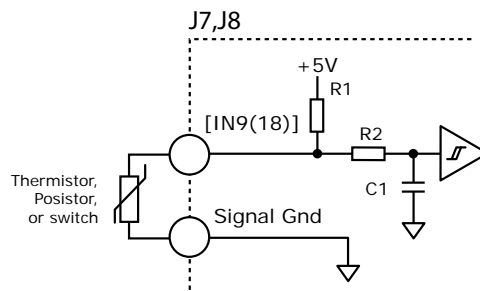

BS 4999:PART 111:1987

Property	Ohms
Resistance in the temperature range 20°C to +70°C	60~750
Resistance at 85°C	≤1650
Resistance at 95°C	≥3990
Resistance at 105°C	≥12000

OPTO-ISOLATED INPUTS: IN5, IN6, IN7, IN8, IN14, IN15, IN16, IN17

- Digital, opto-isolated
- 2 Groups of four, each with own Common terminal
- Works with current sourcing or sinking drivers
- 24V Compatible
- Programmable functions


SPECIFICATIONS

Input	Data	Notes
Input Voltages	HI	$V_{in} \geq \pm 10.0 \text{ Vdc}$ *
	LO	$V_{in} \leq \pm 6 \text{ Vdc}$ *
	Max	±30 Vdc *
Input Current	±24V	±3.6 mA _{dc}
	0V	0 mA _{dc}

* Vdc Referenced to ICOM terminals.

CONNECTIONS

Signal	Pins	Signal	Pins
IN5	J2-2	IN14	J2-7
IN6	J2-3	IN15	J2-8
IN7	J2-4	IN16	J2-9
IN8	J2-5	IN17	J2-18
ICOM1	J2-6	ICOM2	J2-17

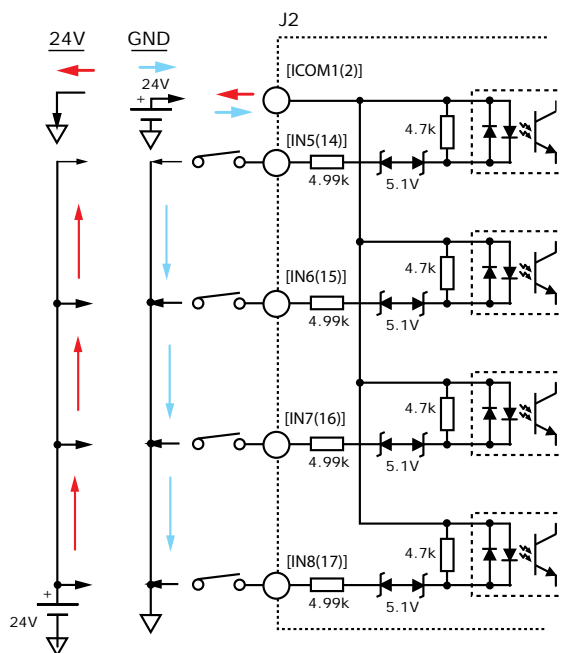

ANALOG INPUTS: AIN1, AIN2

- ± 10 Vdc, differential
- 12-bit resolution
- Programmable functions


The analog inputs have a ± 10 Vdc range at 12-bit resolution. As reference inputs they can take position/velocity/torque commands from a controller. If not used as command inputs, they can be used as general-purpose analog inputs.

SPECIFICATIONS

Spec	Data	Notes
Input Voltage	Vref	± 10 Vdc
Input Resistance	Rin	5.05 k Ω

CONNECTIONS

Signal	Pins	
	Axis A	Axis B
AIN(+)	J1-3	J1-5
AIN(-)	J1-2	J1-4
Sgnd	J1-6, 16, 22, 31, 37, 44	

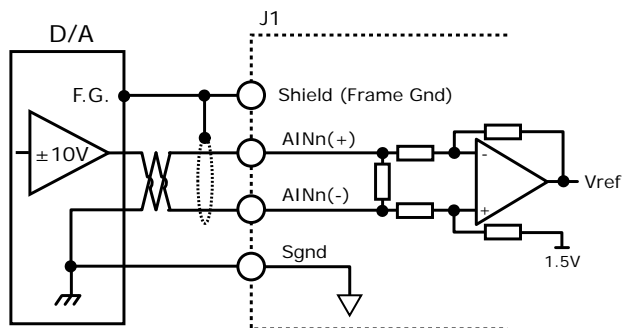


OPTO-ISOLATED OUTPUTS: OUT1, OUT2, OUT3, OUT4, OUT5

- Digital, opto-isolated
- MOSFET output SSR, 2-terminal
- Flyback diodes for inductive loads
- 24V Compatible
- Programmable functions

SPECIFICATIONS

Output	Data	Notes
ON Voltage OUT(+) - OUT(-)	Vdc	0.85V @ 300 mAdc
Output Current	Iout	300 mAdc max

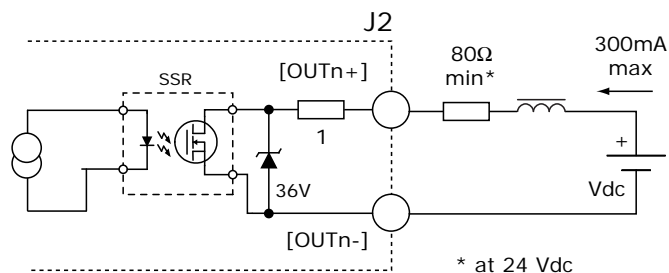

HI/LO DEFINITIONS: OUTPUTS

Input	State	Condition
OUT1~5	HI	Output SSR is ON, current flows
	LO	Output SSR is OFF, no current flows

CONNECTIONS

Signal	(+)	(-)
OUT1	J2-19	J2-10
OUT2	J2-20	J2-11
OUT3	J2-21	J2-12
OUT4	J2-22	J2-13
OUT5	J2-23	J2-14

OPTO-ISOLATED MOTOR BRAKE OUTPUTS: OUT6, OUT7

- Brake outputs
- Opto-isolated
- Flyback diodes for inductive loads
- 24V Compatible
- Connection for external 24V power supply
- Programmable functions

SPECIFICATIONS

Output	Data	Notes
Voltage Range	Max	+30 Vdc
Output Current	Ids	1.0 Adc

HI/LO DEFINITIONS: OUTPUTS

Input	State	Condition
BRK-A,B OUT6,7	HI	Output transistor is OFF Brake is un-powered and locks motor Motor cannot move Brake state is Active
	LO	Output transistor is ON Brake is powered, releasing motor Motor is free to move Brake state is NOT-Active

CME2 Default Setting for Brake Outputs [OUT6,7] is "Brake - Active HI"
Active = Brake is holding motor shaft (i.e. the *Brake is Active*)

Motor cannot move

No current flows in coil of brake

CME2 I/O Line States shows Output 6 or 7 as HI

BRK Output voltage is HI (24V), MOSFET is OFF

Stepper drive output current is zero

Stepper drive is disabled, PWM outputs are off

Inactive = Brake is not holding motor shaft (i.e. the *Brake is Inactive*)

Motor can move

Current flows in coil of brake


CME2 I/O Line States shows Output 6 or 7 as LO

BRK output voltage is LO (~0V), MOSFET is ON

Stepper drive is enabled, PWM outputs are on

Stepper drive output current is flowing

*
There should be only one conductor in each position of the J3 connector. If brakes are to be wired directly to J3 for their 24V power, use a double wire ferrule for J3-4. Information for ferrules can be found on page 27.

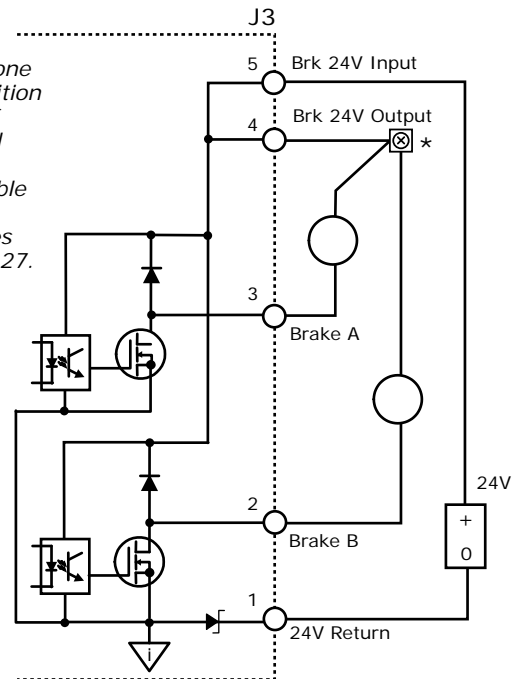


The brake circuits are optically isolated from all drive circuits and frame ground.

CONNECTIONS

Pin	Signal
5	Brk 24V Input
4	Brk 24V Output
3	Brake A [OUT6]
2	Brake B [OUT7]
1	24V Return

This diagram shows the connections to the drive that share a common ground in the driver. If the brake 24V power supply is separate from the DC supply powering the drive, it is important that it connects to an earth or common grounding point with the HV power supply.

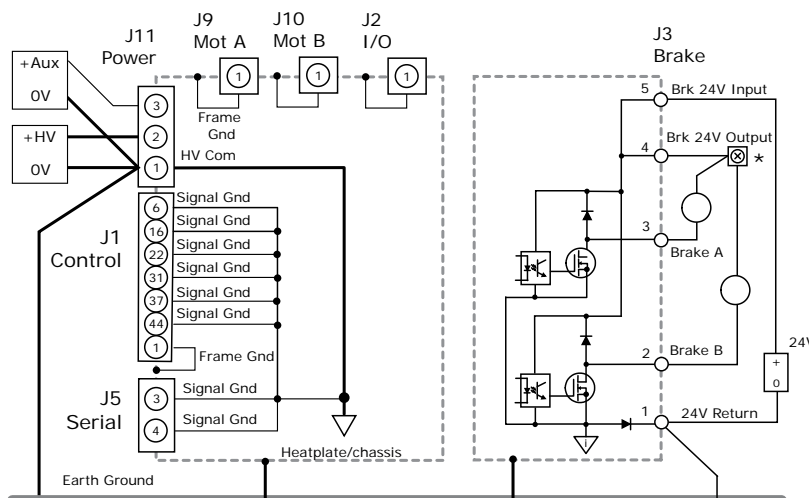

Earthing connections for power supplies should be as close as possible to eliminate potential differences between power supply 0V terminals.


FEEDBACK CONNECTIONS

QUAD A/B/X ENCODER WITH SIGNAL LOSS DETECTION

Encoders with differential line-driver outputs are required (single-ended encoders are not supported) and provide incremental position feedback via the A/B signals and the optional index signal (X). The MAX3097 receiver has differential inputs with fault protections for the following conditions:

Condition	Example
Line-line shorts	A shorted to /A
Open-circuits:	A disconnected, /A connected. Terminator resistor pulls A & /A together for a short-circuit fault
Low-voltage	$V_a - V_b \leq 200 \text{ mV}$, or $\geq -200 \text{ mV}$ Encoder power loss, cabling, etc.

QUAD ENCODER WITH INDEX

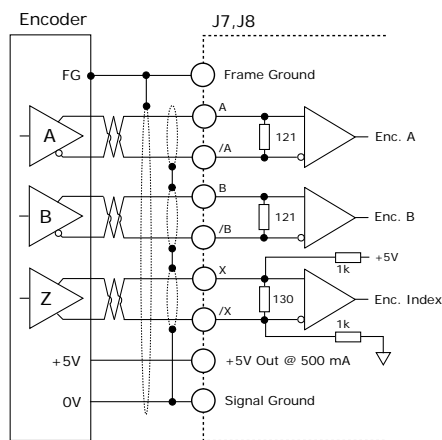


A/B/X SIGNALS

Signal	J7,J8 Pin
Enc A	13
Enc /A	12
Enc B	11
Enc /B	10
Enc X	9
Enc /X	8
+5V	6, 17
Sgnd	5, 16, 25, 26
F.G.	1

Sgnd = Signal Ground
F.G. = Frame Gnd

SIGNAL LOSS DETECTION LOGIC

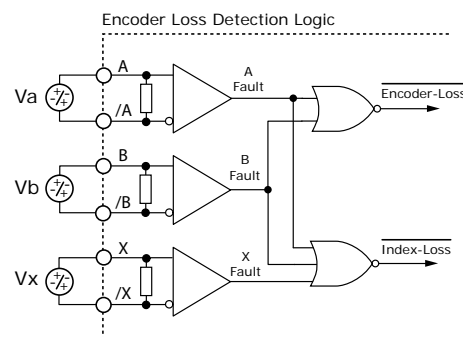

CME2 FEEDBACK OPTIONS

Motor Feedback

1000 lines = 4000 counts

☒ Enable Encoder Loss Detection

☐ Enable Encoder and Index Loss Detection

Motor Feedback

1000 lines = 4000 counts

☒ Enable Encoder Loss Detection


☒ Enable Encoder and Index Loss Detection

Sgnd = Signal Ground
F.G. = Frame Gnd

FEEDBACK CONNECTIONS

ENDAT ABSOLUTE ENCODER

The EnDat interface is a Heidenhain interface that is similar to SSI in the use of clock and data signals, but which also supports analog sin/cos channels from the same encoder. The number of position data bits is programmable as is the use of sin/cos channels. Use of sin/cos incremental signals is optional in the EnDat specification.

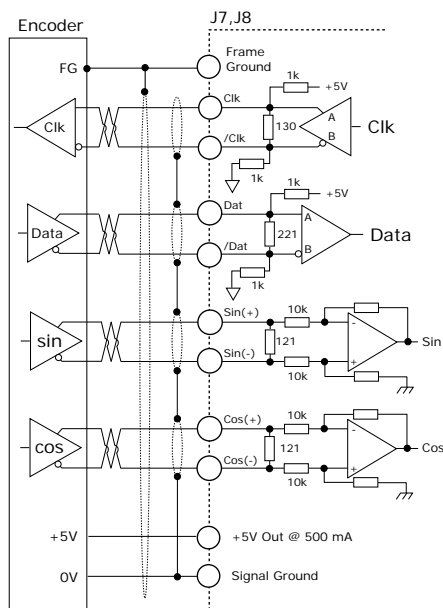


ENDAT SIGNALS

Signal	J7, J8 Pin
Clk	9
/Clk	8
Data	15
/Data	14
Sin(+)	19
Sin(-)	18
Cos(+)	21
Cos(-)	20
+5V	6, 17
Sgnd	5, 16, 25, 26
F.G.	1

Sgnd = Signal Ground
F.G. = Frame Gnd

ABSOLUTE-A ENCODER

The Absolute A interface is a serial, half-duplex type that is electrically the same as RS-485. Note the battery which must be connected. Without it, the encoder will produce a fault condition.

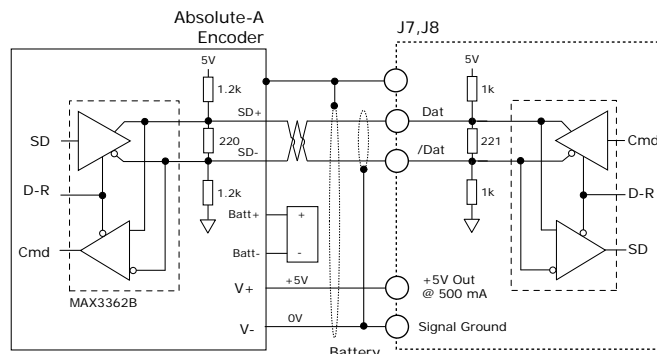

ABSOLUTE-A SIGNALS

Signal	J7, J8 Pin
Data	15
/Data	14
+5V	6, 17
Sgnd	5, 16, 25, 26
F.G.	1

Sgnd = Signal Ground
F.G. = Frame Gnd


MOTOR CONNECTIONS

MOTOR PHASE CONNECTIONS

The drive outputs are three-phase PWM inverters that convert the DC buss voltage (+HV) into three sinusoidal voltage waveforms that drive the motor phase-coils. Cable should be sized for the continuous current rating of the motor. Motor cabling should use twisted, shielded conductors for CE compliance, and to minimize PWM noise coupling into other circuits. The motor cable shield should connect to motor frame and the drive frame ground terminal (J9,J10-1) for best results.


MOTOR SIGNALS

Signal	J9,J10 Pin
Mot A	5
Mot /A	4
Mot B	3
Mot /B	2
Frame Gnd	1

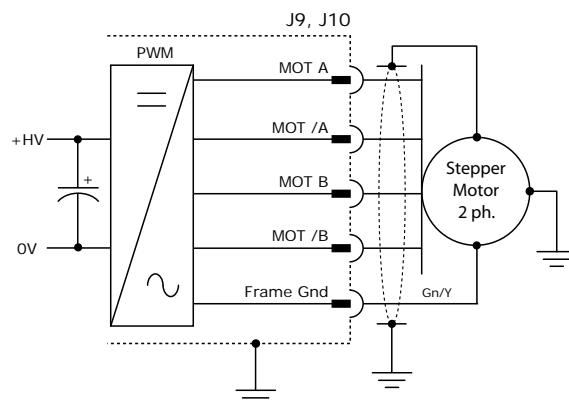

MOTOR OVER TEMP INPUT

The 4.99k pull-up resistor works with PTC (positive temperature coefficient) thermistors that conform to BS 4999:Part 111:1987 (table TP2ow), or switches that open/close indicating a motor over-temperature condition. The active level is programmable. These inputs are programmable for other functions if not used as Motemp inputs. And, other inputs are programmable for the Motemp function.

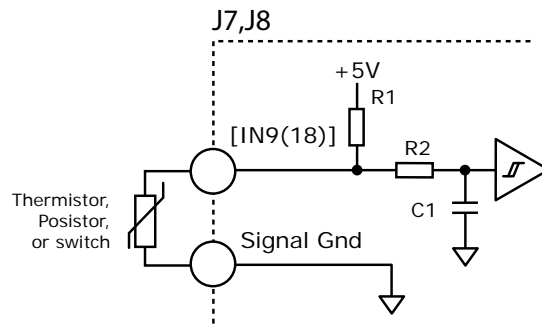

MOTEMP SIGNALS

Signal	Pin
Motemp A	J7-7
Motemp B	J8-7
J7,J8 Signal Ground	5,10
Frame Gnd	12


BS 4999 SENSOR

Property	Ohms
Resistance in the temperature range 20°C to +70°C	60~750
Resistance at 85°C	≤1650
Resistance at 95°C	≥3990
Resistance at 105°C	≥12000

MOTOR CONNECTIONS: DIGITAL QUAD A/B ENCODER

The connections shown may not be used in all installations

Stepnet Plus Panel 2-Axis

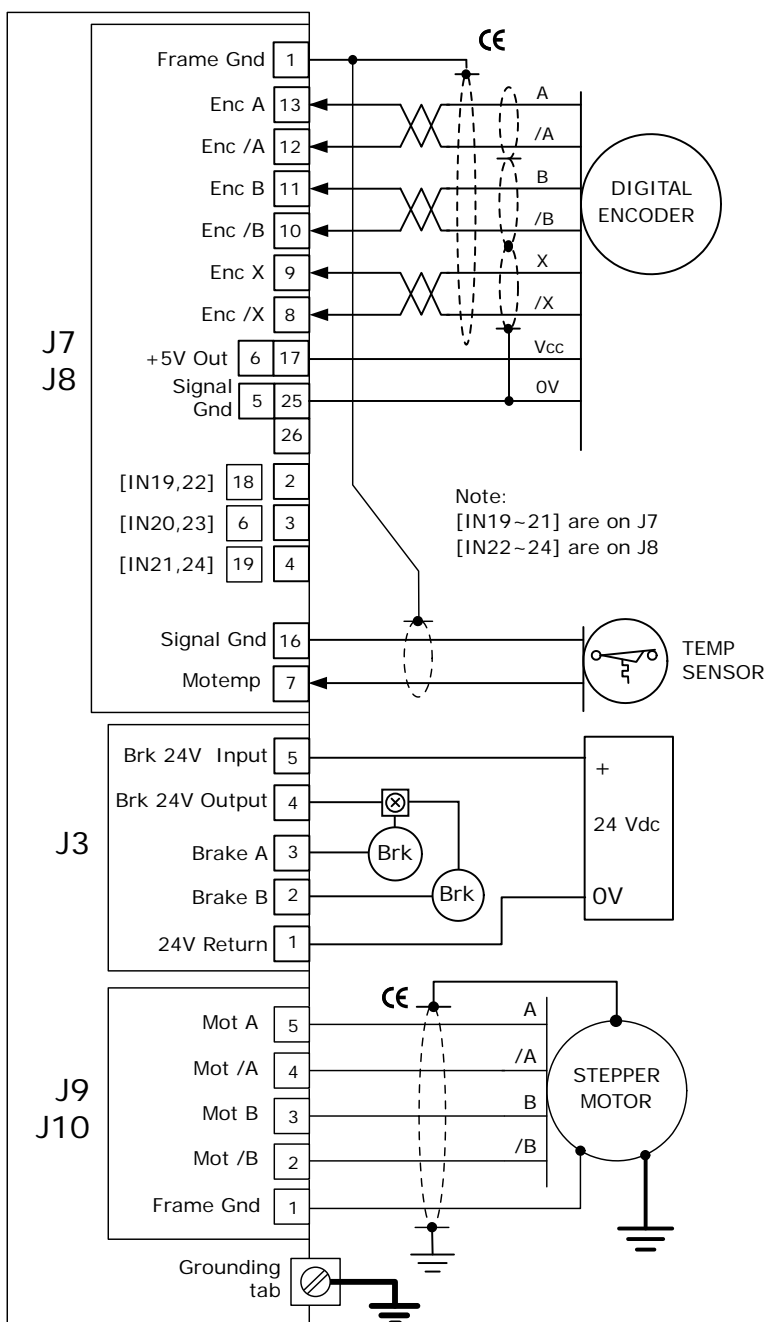


NOTES:

- 1) The +5VOut1 on J1-17,32 and J7-6, 17 is rated for 500 mA
The +5VOut2 on J1-23,38 and J8-6, 17 is rated for 500 mA
These are two independent power supplies, each with a 500 mA max output from all pins
- 2) CE symbols indicate connections required for CE compliance.

DEVICE STRUCTURE & ISOLATION

This graphic shows the electrical structure of the drive, detailing the elements that share a common circuit common (Signal Ground, HV Com) and circuits that are isolated and have no connection to internal circuits. Note that there is no connection between the heatplate (Chassis, Frame Ground) and any drive circuits.

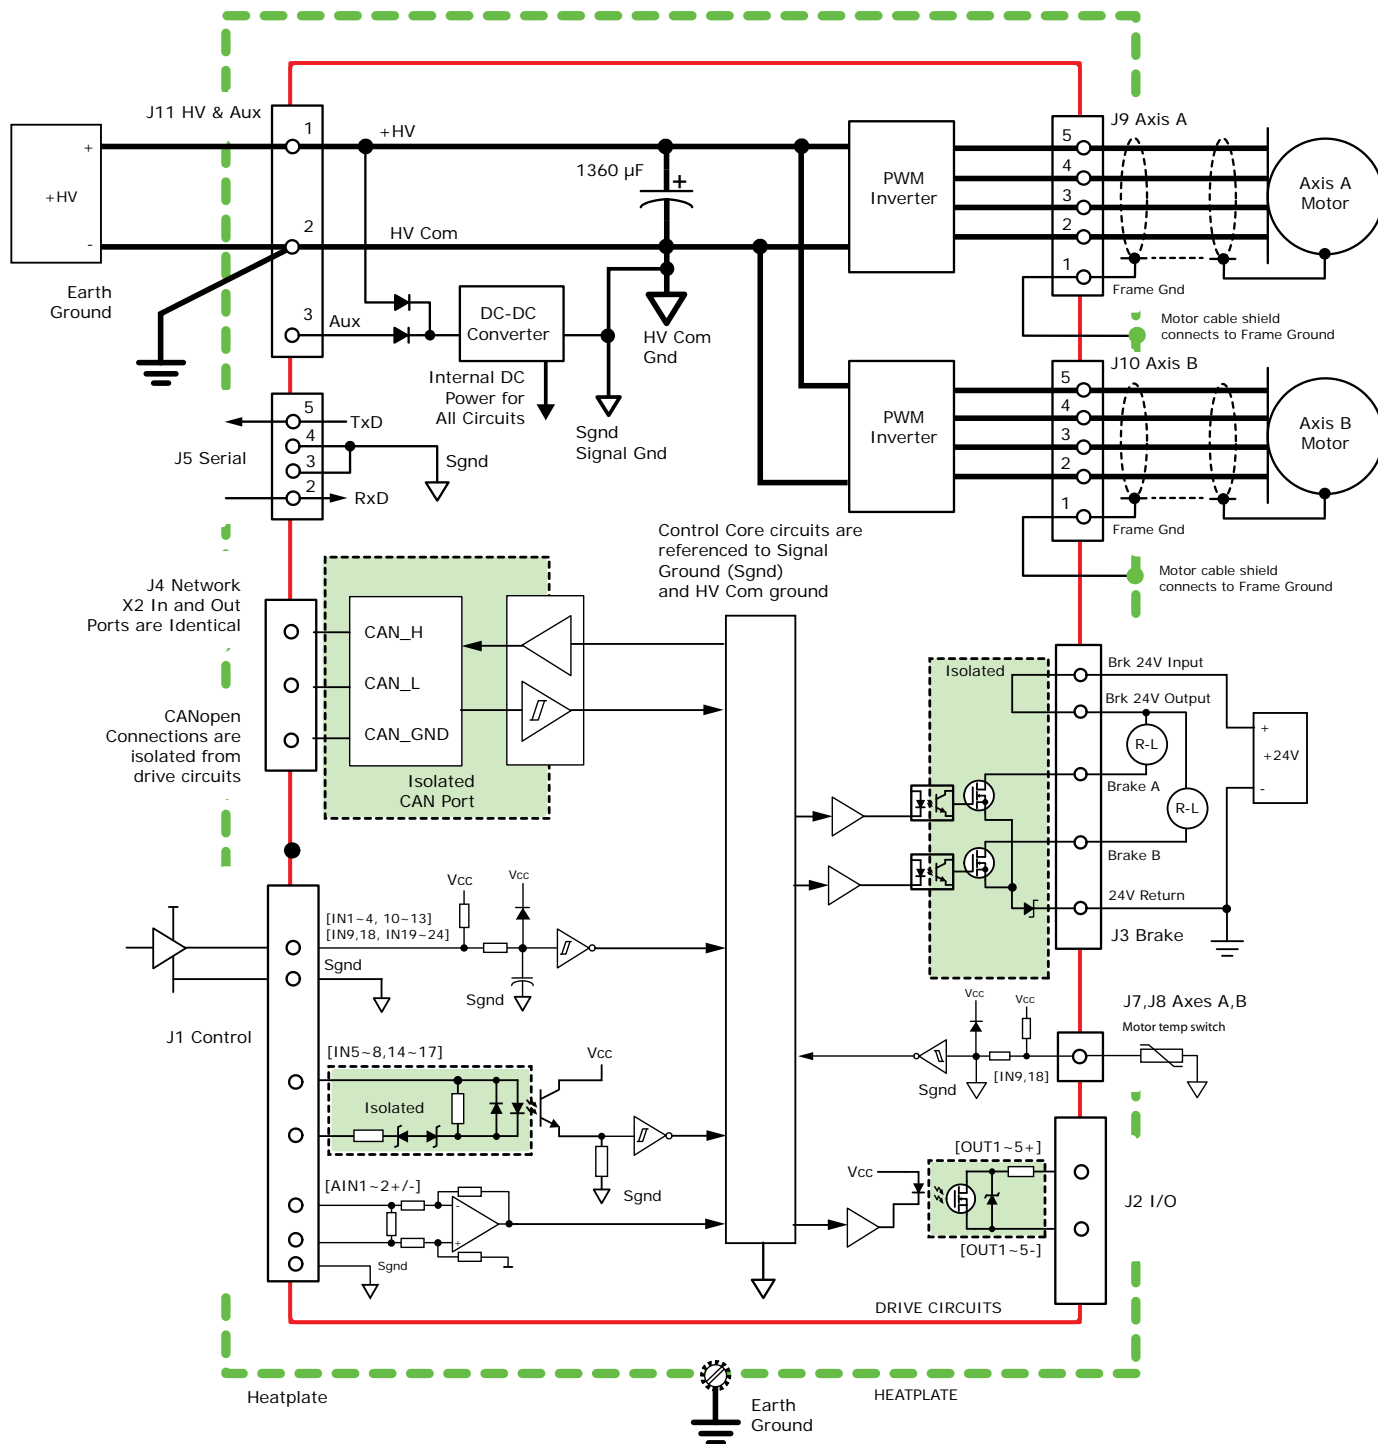


POWER & GROUNDING CONNECTIONS

DC POWER CONNECTIONS

- DC power must be provided by transformers that are galvanically isolated and provide reinforced insulation from the mains. *Auto-transformers cannot be used.*
- The (-) terminal of the power supply is not grounded at the power supply. It is grounded near each drive.
- Cabling to multiple drives for the +HV and 0V is best done in a "star" configuration, and not a "daisy-chain".
- The 0V, or return terminal of the DC power should be connected to frame ground near the drive power connector. From that point, a short wire can connect to the drive HV Ground.
- Cabling to the drive +HV and 0V terminals must be sized to carry the expected continuous current of the drive in the user's installation.
- DC power cabling should be shielded, twisted-pair for best EMI reduction. The shield should connect to the power supply frame ground on one end, and to the drive frame ground on the other. Adding a pigtail and ring-lug, as short as possible will provide a good connection of the shield at the drive.
- Motor cabling typically includes a green/yellow conductor for protective bonding of the motor frame. Connect as shown in the Motor Connections diagram on the following page.
- Motor cable conductors should be twisted and shielded for best EMI suppression.
- If a green/yellow grounding wire connects the motor to the drive's PE terminal, the shield pigtail and ring-lug may connect to one of the screws that mount the drive to the panel. A P-clip to ground the shield as near as possible to the drive will increase the EMI suppression of the shield. On the motor-end, the shield frequently connects to the connector shell. If the motor cable is a flying-lead from the motor, the shield may be connected to the motor frame internally.
- Braided cable shields are more effective for EMI reduction than foil shields. Double-shielded cables typically have a braided outer shield and foil shields for the internal twisted pairs. This combination is effective for both EMI reduction and signal quality of the feedback signals from analog encoders or resolvers.
- Motor cable shielding is not intended to be a protective bonding conductor unless otherwise specified by the motor manufacturer.
- For feedback cables, double-shielded cable with a single outer shield and individual shielded twisted pair internal shields gives the best results with resolvers, or analog sin/cos encoders.
- In double-shielded cables, the internal shielding should connect to the drive's Signal Ground on one end, and should be unconnected on the motor end.
- Single-shield feedback cables connect to the drive frame on one end, and to the motor frame on the other. Depending on the construction of the motor, leaving the feedback cable shield disconnected on the motor but connected on the drive end may give better results.
- The drive should be secured to the equipment frame or panels using the mounting slots. This ensures a good electrical connection for optimal EMI performance. The drive chassis is electrically conductive.

DC POWER WIRING


P-clips secure cables to a panel and provide full contact to the cable shields after the insulation has been stripped. This should be done as close to the drive as possible for best EMI attenuation.

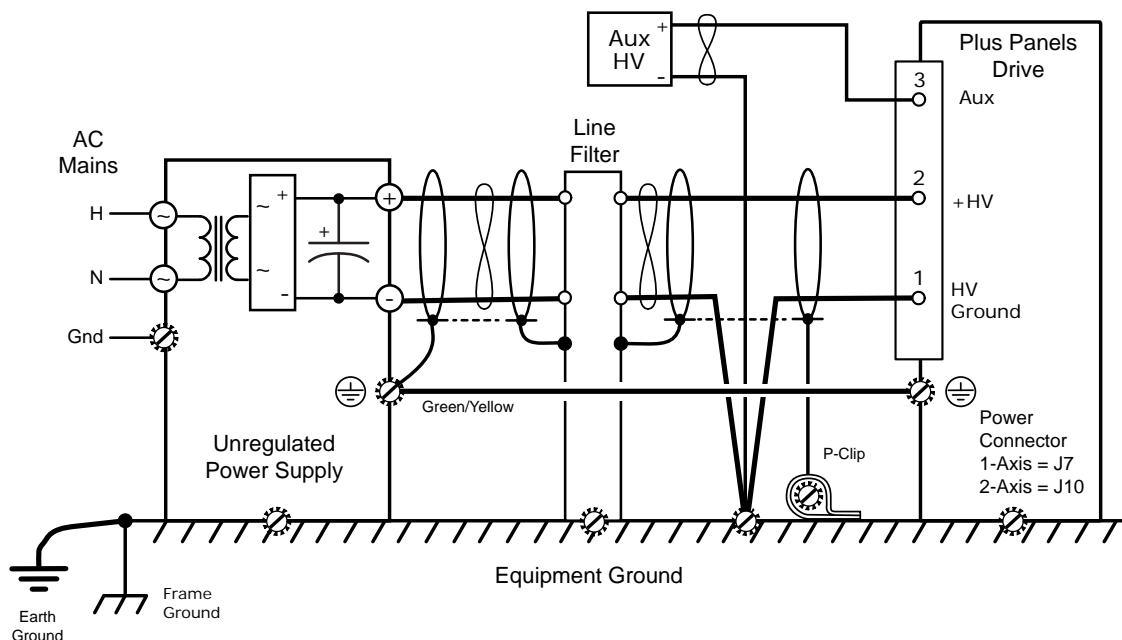

+HV POWER SUPPLY REQUIREMENTS


Regulated Power Supplies

- Must be over-voltage protected to 100 Vdc max when the STO (Safe Torque Off) feature of the drive is used.
- Require a diode and external capacitor to absorb regenerative energy.
- The VA rating should be greater than the actual continuous output power of the drives connected to the power supply, and adequate for the transient output power due to acceleration of motor loads.
- Must handle the internal capacitance of the drives on startup.

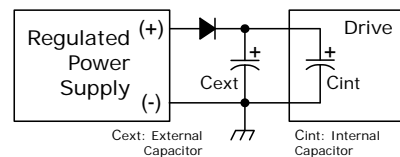

Unregulated Power Supplies

- No-load, high-line output voltage must not exceed 90 Vdc.
- Power supply internal capacitance adds to the drive's internal capacitance for absorption of regenerative energy.
- The VA (Volts & Amps) rating at the power supply's AC input is typically 30~40% greater than the total output power of the drives.

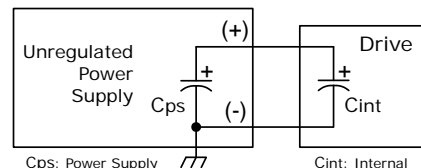

AUXILIARY HV POWER


- Aux HV is power that can keep the drive communications and feedback circuits active when the PWM output stage has been disabled by removing the main +HV supply.
- Useful during EMO (Emergency Off) conditions where the +HV supply must be removed from the drive and powered-down to ensure operator safety.
- Voltage range is the same as +HV.
- Powers the DC/DC converter that supplies operating voltages to the drive DSP and control circuits.
- Aux HV draws no current when the +HV voltage is greater than the Aux HV voltage.

MOTOR CONNECTIONS

- Motor cable shield connects to motor frame, is grounded with a P-clip near the drive and terminates in a ring-lug that is screwed to the drive chassis by a mounting screw to the panel.
- If provided, a green/yellow grounding wire from the motor connects to the F.G. terminal of the motor connector.

FEEDBACK CONNECTIONS


- Cable shield connects to motor frame and to the F.G. terminal of the feedback connector.
- When double-shielding is used, the inner shields connect to the Signal Ground at the drive, and is not connected at the motor end.
- If not provided by the motor manufacturer, feedback cables rated for RS-422 communications are recommended for digital encoders.

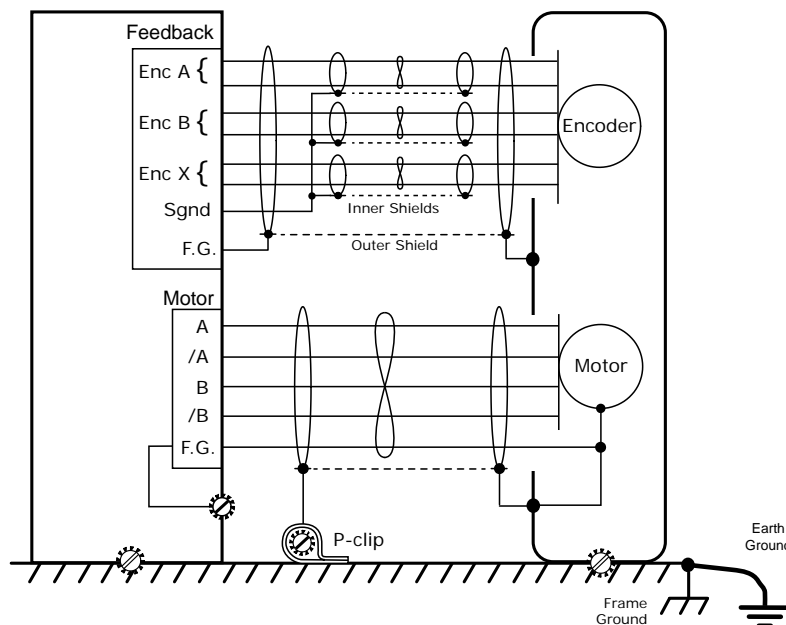

REGENERATION

This chart shows the energy absorption in W-s for the drive operating at some typical DC voltages. It is based on the internal 470 uF capacitor and would be increased by the capacitance of the external DC power supply. When the load mechanical energy is greater than these values an external regenerative energy dissipater is required, or the DC power supply capacitance can be increased to absorb the regen energy.


ENERGY ABSORPTION

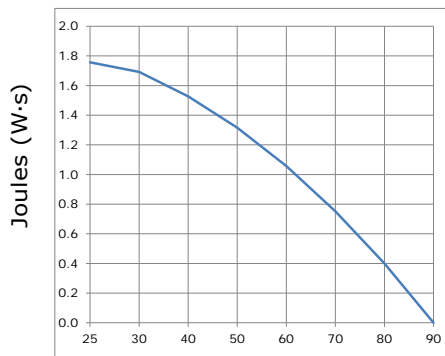

CONNECTORS & SIGNALS: FRONT PANEL

J6 SAFETY (SAFETORQUE OFF)

PIN	SIGNAL	PIN	SIGNAL
1	Frame Gnd	6	STO-IN1+
2	STO-IN1+	7	STO-IN1-
3	STO-IN1-	8	STO-Bypass
4	STO-IN2+	9	STO-Gnd
5	STO-IN2-		

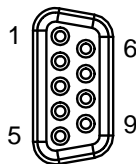

J6 TP2 CONNECTOR:

Dsub DE-09F, 9 position female receptacle

J6 CABLE CONNECTOR:

Dsub DE-09M, 9 position

Details on J1, J2, J6, J7, and J8 cable connectors can be found in the TP2-CK listing under the Accessories section of the last page

J2: ISOLATED CONTROL


PIN	SIGNAL	PIN	SIGNAL	PIN	SIGNAL
9	[IN16] GPI	18	[IN17] GPI	26	n.c.
8	[IN15] GPI	17	COM2 [IN14~17]	25	n.c.
7	[IN14] GPI	16	N/C	24	n.c.
6	COM1 [IN5~8]	15	N/C	23	[OUT5+] GPI
5	[IN8] GPI	14	[OUT5-] GPI	22	[OUT4+] GPI
4	[IN7] GPI	13	[OUT4-] GPI	21	[OUT3+] GPI
3	[IN6] GPI	12	[OUT3-] GPI	20	[OUT2+] GPI
2	[IN5] GPI	11	[OUT2-] GPI	19	[OUT1+] GPI
1	Frame Ground	10	[OUT1-] GPI		

J2: TP2 CONNECTOR

High-Density Dsub DA-26M, male plug, 26 Position

J2: CABLE CONNECTOR

High-Density Dsub DA-26F, female receptacle, 26 Position



J1: CONTROL SIGNALS



PIN	SIGNAL	PIN	SIGNAL	PIN	SIGNAL
1	Frame Gnd	16	Signal Gnd	31	Signal Gnd
2	[AIN1-]	17	A +5Vdc Out1	32	A +5Vdc Out1
3	[AIN1+]	18	A-MultiEnc /S	33	A-MultiEnc S
4	[AIN2-]	19	A-MultiEnc /X	34	A-MultiEnc X
5	[AIN2+]	20	A-MultiEnc /B	35	A-MultiEnc B
6	Signal Gnd	21	A-MultiEnc /A	36	A-MultiEnc A
7	[IN1]	22	Signal Gnd	37	Signal Gnd
8	[IN2]	23	B +5Vdc Out2	38	B +5Vdc Out2
9	[IN3] Diff1(+)	24	B-MultiEnc /S	39	B-MultiEnc S
10	[IN4] Diff1(-)	25	B-MultiEnc /X	40	B-MultiEnc X
11	N/C	26	B-MultiEnc /B	41	B-MultiEnc B
12	[IN10]	27	B-MultiEnc /A	42	B-MultiEnc A
13	[IN11]	28	N/C	43	N/C
14	[IN12] Diff2(+)	29	N/C	44	Signal Gnd
15	[IN13] Diff2(-)	30	N/C		

J1: TP2 CONNECTOR

High-Density Dsub DB-44F, female receptacle, 44 Position

J2: CABLE CONNECTOR


High-Density Dsub DB-44M, male plug, 44 Position

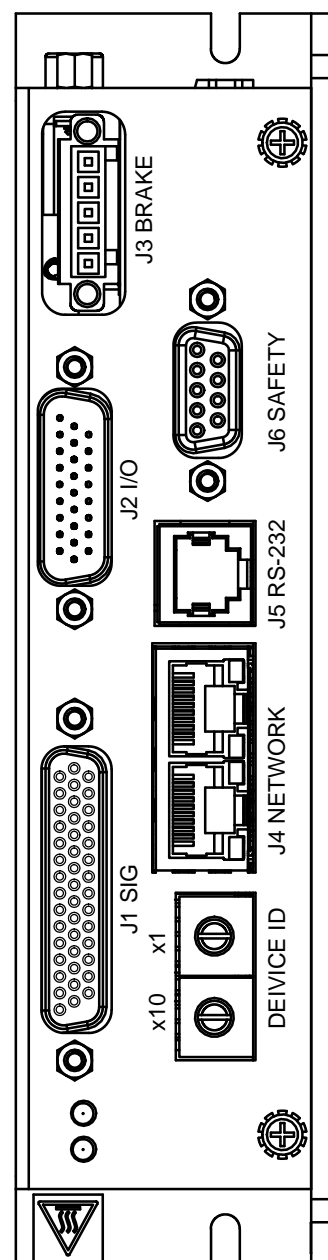

CONNECTORS & SIGNALS: FRONT PANEL

J3: BRAKE

Pin	Signal
5	Brk 24V Input
4	Brk 24V Output
3	Brake A [OUT6]
2	Brake B [OUT7]
1	24V Return



J3: DRIVE CONNECTOR

Euro-style 3.5 mm male receptacle, 5-position
Wago: MCS-MINI, 734-165/108-000

J3: CABLE CONNECTOR

Wago MCS-MINI 734-105/107-000
or 734-105/107-000

WAGO CONNECTOR TOOL

Contact opener: 734-191 operating tool


CONNECTORS & SIGNALS: END PANEL

J7, J8: AXIS A, B FEEDBACK

PIN	SIGNAL
1	Frame Gnd
2	[IN19(22)] A(B)
3	[IN20(23)] A(B)
4	[IN21(24)] A(B)
5	Signal Gnd
6	A(B) +5VOut1(2)
7	[IN9(18)] A(B) Motemp
8	A(B) Enc /X
9	A(B) Enc X

PIN	SIGNAL
10	A(B) Enc /B
11	A(B) Enc B
12	A(B) Enc /A
13	A(B) Enc A
14	A(B) Enc /S
15	A(B) Enc S
16	Signal Gnd
17	A(B) +5VOut1(2)
18	A(B) Sin(-)

PIN	SIGNAL
19	A(B) Sin(+)
20	A(B) Cos(-)
21	A(B) Cos(+)
22	N/C
23	N/C
24	N/C
25	Signal Gnd
26	Signal Gnd





J7, J8

J7, J8: FEEDBACK


J7, J8: TP2 CONNECTOR
High-Density Dsub DA-26F,
female receptacle, 26 Position

J7, J8: CABLE CONNECTOR
High-Density Dsub DA-26M,
male plug, 26 Position

J9, J10

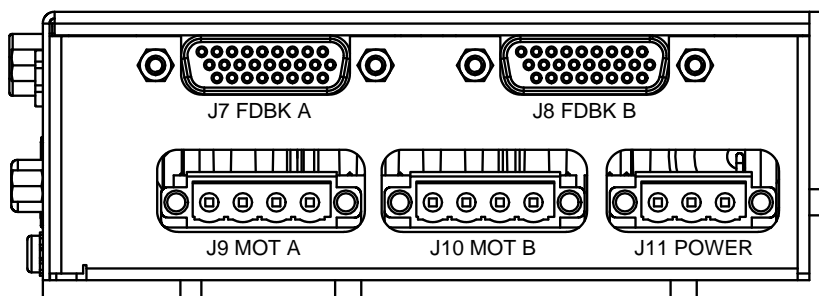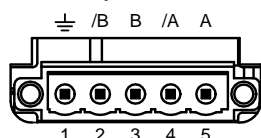

J11



J9, J10: MOTOR OUTPUTS

Signal	Pin
Motor Phase A	5
Motor Phase /A	4
Motor Phase B	3
Motor Phase /B	2
Frame Ground	1

J9, J10: DRIVE CONNECTORS

Euro-style 5.08 mm male receptacle, 5-position
Wago: MCS-MIDI, 231-565/108-000

J9, J10 CABLE CONNECTORS

Wago MCS-MIDI Classic 231-305/107-000

WAGO CONNECTOR TOOL

Contact opener: 231-291 operating tool

J11: +HV & AUX POWER

Signal	Pin
Aux HV	3
HV	2
HV Ground	1

J11: DRIVE CONNECTOR

Euro-style 5.08 mm male receptacle, 3-position
Wago: MCS-MIDI, 231-563/108-000

J11: CABLE CONNECTOR

Wago MCS-MIDI, 231-303/107-000

WAGO CONNECTOR TOOL

Contact opener: 231-291 operating tool

WIRING

24V & BRAKE: J3

Wago MCS-MINI: 734-105/031-000, female connector; with screw flange, 5-pole; pin spacing 3.5 mm / 0.138 in

Conductor capacity

Bare stranded:

Insulated ferrule:

Stripping length:

Operating tool:

AWG 28~16 [0.08~1.5 mm²]

AWG 24~16 [0.25~1.5 mm²]

0.24~0.28 in [6~7 mm]

Wago MCS-MINI: 734-231

J3

Tool




FERRULE PART NUMBERS: SINGLE WIRE INSULATED

AWG	mm ²	Color	Mfgr	PNUM	A	B	C	D	E	SL
18	1.0	Red	Wago	216-223	12.0 (.47)	6.0 (.24)	1.4 (.06)	3.0 (.12)	3.5 (.14)	8 (.31)
20	0.75	Gray	Wago	216-222	12.0 (.47)	6.0 (.24)	1.2 (.05)	2.8 (.11)	3.3 (.13)	8 (.31)
22	0.5	White	Wago	216-221	12.0 (.47)	6.0 (.24)	1.0 (.04)	2.6 (.10)	3.1 (.12)	7.5 (.30)


FERRULE PART NUMBERS: DOUBLE WIRE INSULATED

AWG	mm ²	Color	Mfgr	PNUM	A	B	C	D	E	SL
2 x 18	2 x 1.0	Red	Altech	2776.0	15.4 (.61)	8.2 [.32]	2.4 (.09)	3.2 (.13)	5.8 (.23)	11.0 (.43)
2 x 18	2 x 1.0	Gray	Altech	2775.0	14.6 (.57)	8.2 (.32)	2.0 (.08)	3.0 (.12)	5.5 (.22)	11.0 (.43)
2 x 20	2 x 0.75	White	Altech	2794.0	14.6 (.57)	8.2 (.32)	1.7 (.07)	3.0 (.12)	5.0 (.20)	11.0 (.43)
2 x 20	2 x 0.75	Gray	TE	966144-2	15.0 (.59)	8.0 (.31)	1.70 (.07)	2.8 (.11)	5.0 (.20)	10 (.39)
2 x 22	2 x 0.50	White	TE	966144-1	15.0 (.59)	8.0 (.31)	1.40 (.06)	2.5 (.10)	4.7 (.19)	10 (.39)

SINGLE WIRE

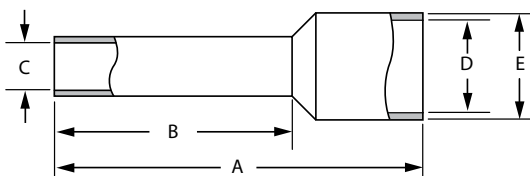

DOUBLE WIRE

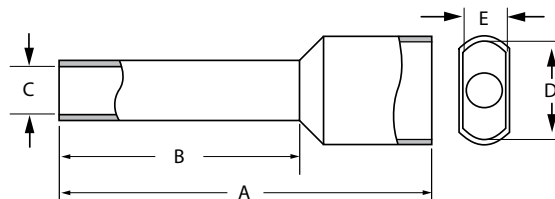

MOTOR OUTPUTS AND HV/AUX POWER: J9, J10 & J11

Wago MCS-MIDI Classic: 231-305/107-000 (J9, J10), 231-303/107-000 (J11), female connector; with screw flange; pin spacing 5.08 mm / 0.2 in

Conductor capacity

Bare stranded:

Insulated ferrule:

Stripping length:

Operating tool:

AWG 28~14 [0.08~2.5 mm²]

AWG 24~16 [0.25~1.5 mm²]

8~9 mm

Wago MCS-MIDI Classic: 231-159

J9, J10

J11

Tool



FERRULE PART NUMBERS: SINGLE WIRE INSULATED


AWG	mm ²	Color	Mfgr	PNUM	A	B	C	D	E	SL
14	2.5	Blue	Wago	216-206	15.0 (0.59)	8.0 (0.31)	2.05 (.08)	4.2 (0.17)	4.8 (0.19)	10 (0.39)
16	1.5	Black	Wago	216-204	14.0 (0.59)	8.0 (0.31)	1.7 (.07)	3.5 (0.14)	4.0 (0.16)	10 (0.39)
18	1.0	Red	Wago	216-223	12.0 (.47)	6.0 (.24)	1.4 (.055)	3.0 (.12)	3.5 (.14)	8 (.31)
20	0.75	Gray	Wago	216-222	12.0 (.47)	6.0 (.24)	1.2 (.047)	2.8 (.11)	3.3 (.13)	8 (.31)
22	0.5	White	Wago	216-221	12.0 (.47)	6.0 (.24)	1.0 (.039)	2.6 (.10)	3.1 (.12)	7.5 (.30)

NOTES

PNUM = Part Number

SL = Stripping length

Dimensions: mm (in)

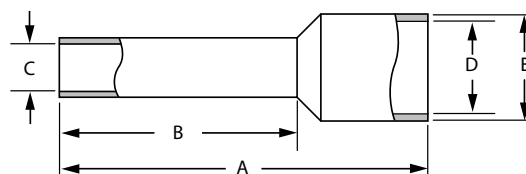

THERMALS: POWER DISSIPATION

The top chart on this page shows the internal power dissipation for one axis of the TP2 under differing power supply and output current conditions. The +HV values are for the average DC voltage of the drive power supply. The lower chart shows the temperature rise vs. power dissipation under differing mounting and cooling conditions.

TOTAL POWER DISSIPATION

Use this chart to find the total power dissipation for both axes.


Example:

Power supply HV = 65 Vdc

Axis 1 current = 7.5 A, axis 2 = 9.0 A

Total current = 16.5 A

Total dissipation = 19 Watts

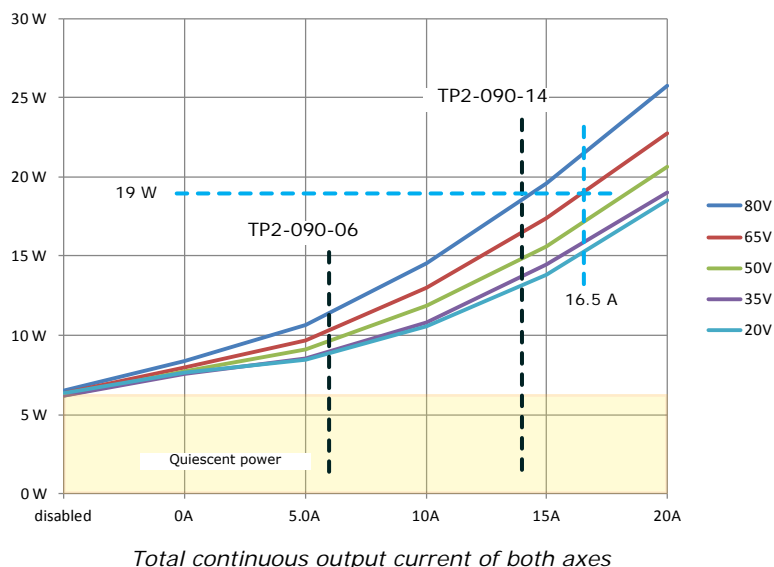


THERMALS: MAXIMUM OPERATING TEMPERATURE VS. DISSIPATION

Use this chart to find the maximum operating temperature of the drive under differing mounting and cooling conditions.

Example:

Using the 19 W value from the calculations above, draw a vertical line. This shows that 24 C is the maximum operating temperature for NHSNF, and that any of the other mounting/cooling options will be sufficient for operation up to the maximum ambient temperature of 45 C.


HSF = Heat Sink (with) Fan
NHSF = No Heat Sink (with) Fan
HSNF = Heat Sink No Fan
NHSNF = No Heat Sink No Fan

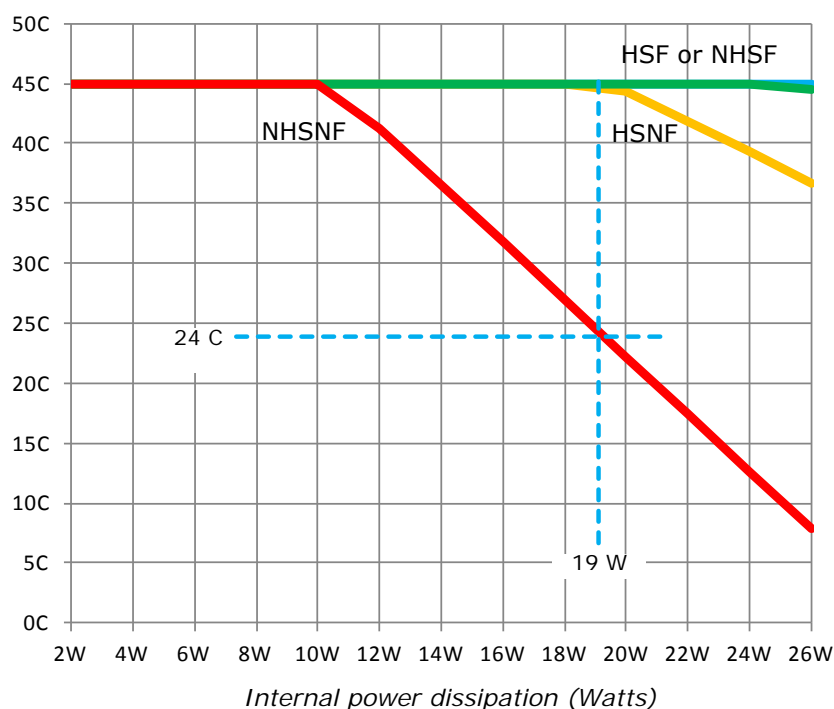

THERMALS: MOUNTING & THERMAL RESISTANCE

MOUNTING

Thermal data for convection-cooling with a heatsink assumes a vertical mounting of the drive on a thermally non-conducting surface. Heatsink fins run parallel to the long axis of the drive. When fan-cooling is used vertical mounting is not necessary to guarantee thermal performance of the heatsink.

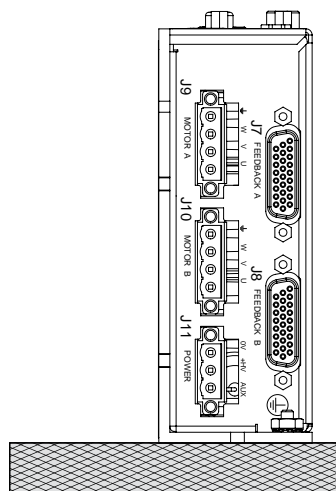


NO HEATSINK, NO FAN	°C/W
CONVECTION	2.32

THERMAL RESISTANCE


Thermal resistance is a measure of the temperature rise of the drive heatplate due to power dissipation in the drive. It is expressed in units of °C/W where the degrees are the temperature rise above ambient.

E.g., an drive dissipating 16 W mounted with no heatsink or fan would see a temperature rise of 38.2C above ambient based on the thermal resistance of 2.39C/W. Using the drive maximum heatplate temperature of 70C and subtracting 38.2C from that would give 31.7C as the maximum ambient temperature the drive in which the drive could operate before going into thermal shutdown. To operate at higher ambient temperatures a heatsink or forced-air would be required.


TOP VIEWS VERTICAL MOUNTING

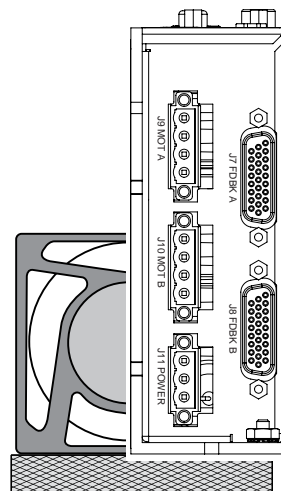

NO HEATSINK + FAN	°C/W
FORCED-AIR, 300 LFM	0.98

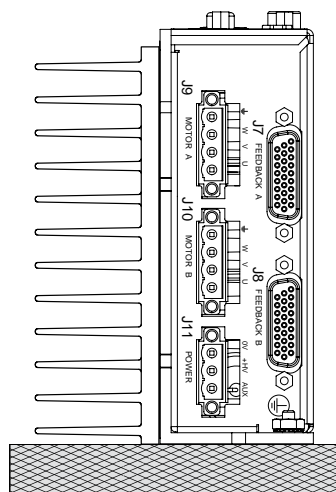

HEATSINK, NO FAN	°C/W
CONVECTION	1.28

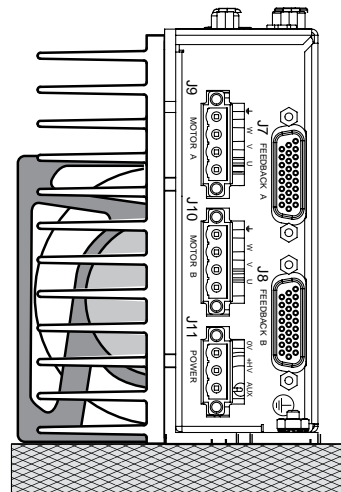

HEATSINK + FAN	°C/W
FORCED-AIR, 300 LFM	0.61

HEATSINK KIT INSTALLATION

- Standard heatsink for Stepnet Plus Panel TP2
- Complete kit for user installation of the heatsink

DESCRIPTION

The TP2-HK is a kit containing a heatsink and mounting hardware for field installation of a standard heatsink onto a TP2 model stepper drive.


To order an TP2 drive with heatsink fitted at the factory, add "-H" to the model part number.

TP2-HK HEATSINK KIT PART LIST


Qty	Description
1	Heatsink, standard, TP2-HS
1	Thermal material, 4x4 in.
1	Kit, Heatsink Hardware, TP2
	4 Washer, flat, #8
	4 Screw, PAN, SEMS, #8-32 x 1/2 in

INSTALLATION


- 1) Place the heatsink fins-down on a work surface. Orient the heatsink so that the edge with part number is away from you. The hole for the TP2 grounding lug should be to your left.
- 2) Remove the clear protective film from the thermal material and discard it. Place the thermal material onto the heatsink in the placement area which is marked with four white "L".
Apply light pressure to ensure that the thermal material is flat.
- 3) Peel the white protective layer away from the thermal material. Do this slowly from one corner so as not to lift the thermal material from the heatsink.
- 4) Align the TP2 as shown and lower onto the heatsink. If needed to adjust the position, lift it away from the thermal material and lower onto the heatsink again.
- 5) Install the four mounting screws with flat washers and tighten evenly. Torque to 17.8 lb-in (2.0 Nm) maximum.

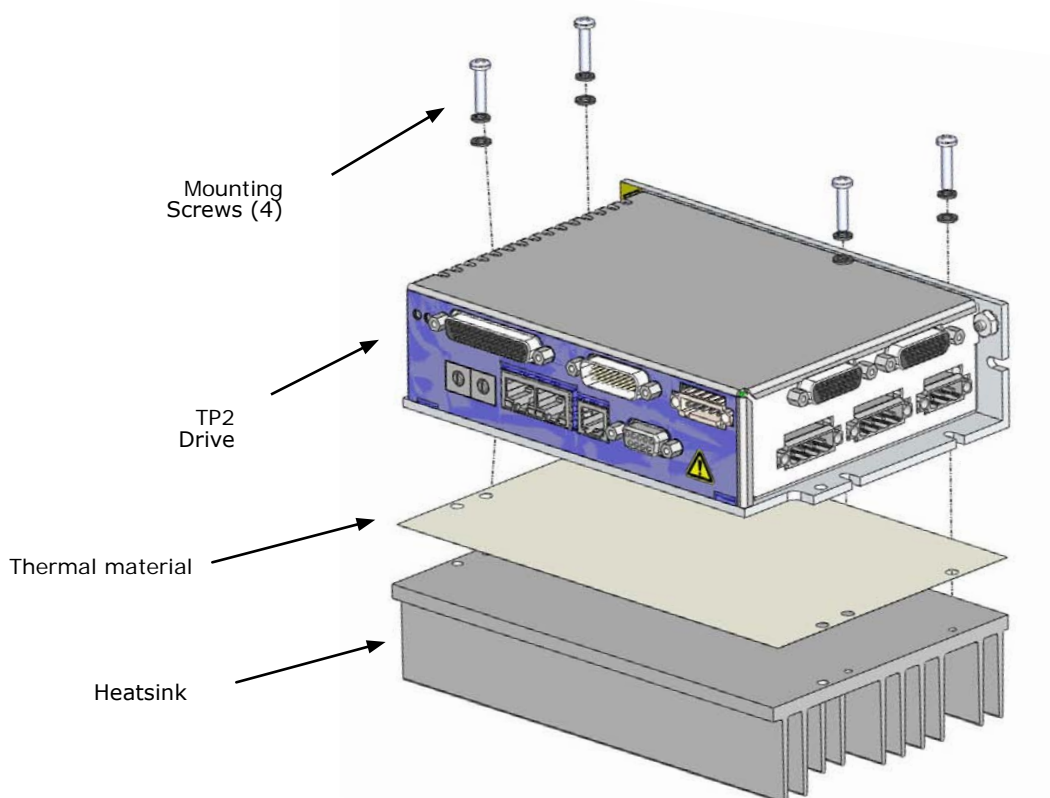

DIMENSIONS: IN (MM)

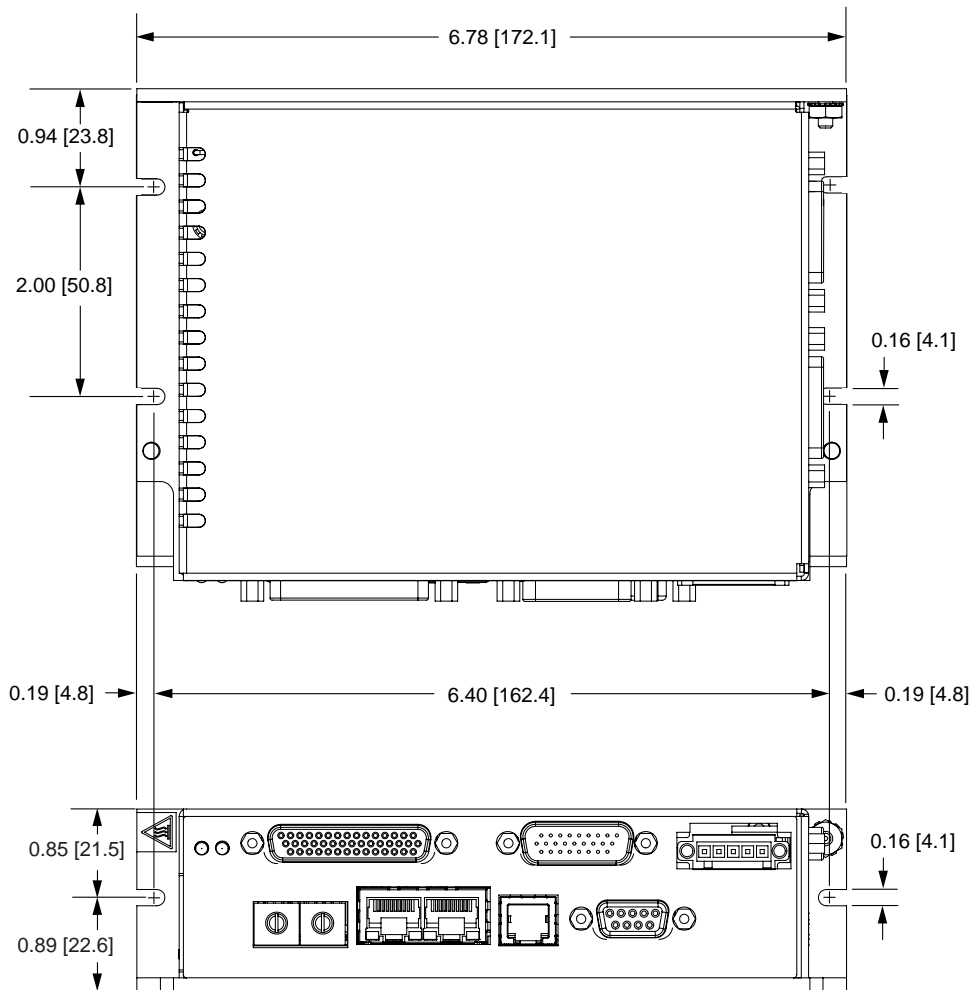

Mounting screws:
#6-32, or 3.5 mm

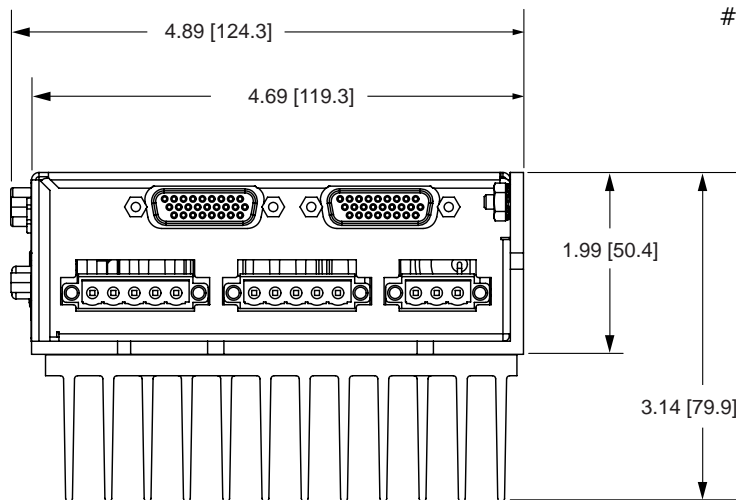

ORDERING GUIDE

TP2-090-06	Stepnet Plus 2-Axis Panel CANopen stepper drive, 3/6 A, 90 Vdc
TP2-090-14	Stepnet Plus 2-Axis Panel CANopen stepper drive, 7/14 A, 90 Vdc

Add -H to model number for factory-installed heatsink

Example: Order one *Stepnet Plus TP2* drive, 7/14 A, with connector kit, serial cable kit, heatsink fitted at the factory:

Qty	Item	Remarks
1	TP2-090-14-H	Stepnet Plus TP2 2-axis servo drive, and factory-mounted heatsink
1	TP2-CK	TP2 Connector Kit
1	SER-CK	Serial Cable Kit

ACCESSORIES

	Qty	Ref	Name	Description	Manufacturer P/N
TP2-CK Connector Kit	1	J11	DC HV	Plug, 3 position, 5.08 mm, female	Wago: 231-303/107-000 (Note 1)
	1			Strain relief, snap-on, 5.08 mm, 3 position, orange	Wago: 232-633
	2	J9, J10	Motor	Plug, 5 position, 5.08 mm, female	Wago: 231-305/107-000 (Note 1)
	2			Strain relief, snap-on, 5.08 mm, 4 position, orange	Wago: 232-635
	1	J9~J11	Tool	Tool, wire insertion & extraction, 231 series	Wago: 231-159
	1	J3	Brake	Plug, 5 position, 3.5 mm, female	Wago: 734-105/107-000 (Note 1)
	1			Strain relief, snap-on, 3.5 mm, 5 position, grey	Wago: 734-605
	1			Tool, wire insertion & extraction, 734 series	Wago: 734-231
	1	J6 Note 2	Safety	Connector, DB-9M, 9-position, standard, male	TE/AMP: 205204-4
	9			AMPLIMITE HD-20 Crimp-Snap contacts, 24-20AWG, AU flash	TE/AMP: 66506-9
	1			Metal Backshell, DB-9, RoHS	3M: 3357-9209
	4			Jumper, with pins crimped on both ends	Copley: 10-75177-01
	1	J1	Control	Connector, high-density DB-44M, 44 position, male, solder cup	Norcomp: 180-044-103L001
	1			Metal Backshell, DB-25, RoHS	3M: 3357-9225
	1	J2	I/O	Connector, high-density DB-26F, 26 position, female, solder cup	Norcomp: 180-026-203L001
	2	J7, J8	Feed-back	Connector, high-density DB-26M, 26 position, male, solder cup	Norcomp: 180-026-103L001
	3	J2, J7, J8		Metal Backshell, DB-15, RoHS	3M: 3357-9215
SER-CK	1	J5	RS-232	Serial Cable Kit	
TP2-NC-10	1	J8	Network	CAN network cable, 10 ft (3 m)	
TP2-NC-01	1			CAN network cable, 1 ft (0.3 m)	

Note 1: For RoHS compliance, append "/RN01-0000" to the Wago part numbers listed above

Note 2: Insertion/extraction tool for J6 contacts is AMP/Tyco 91067-2 (not included in TP2-CK)